


RELAMPING INSTRUCTIONS FOR # 05-1156-44 (118048)

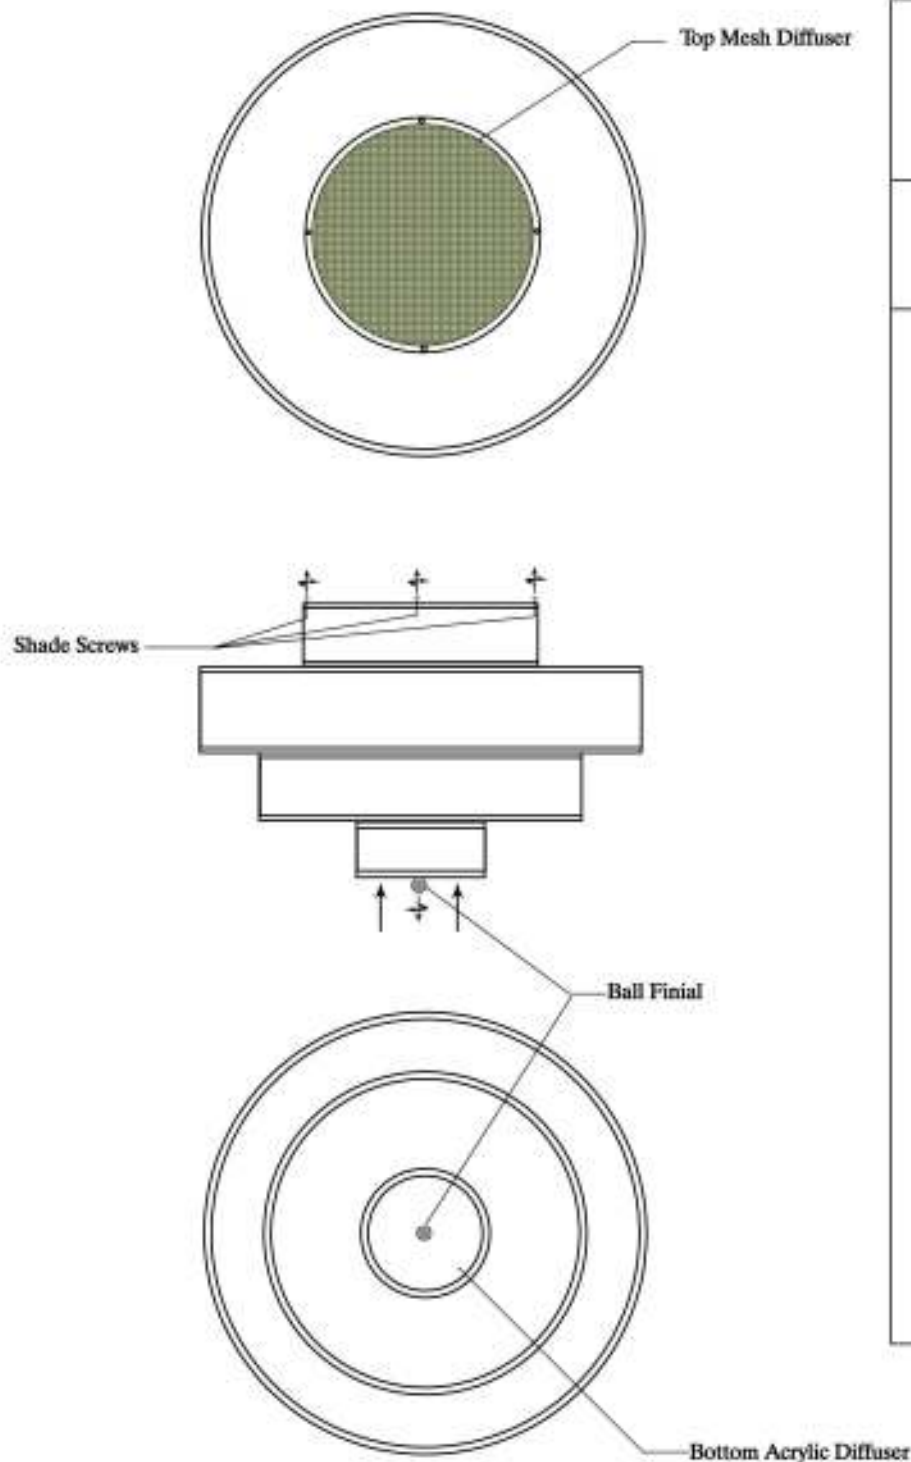

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Top Cluster

- 1.) Remove shade screws from top mesh diffuser.
- 2.) Remove mesh diffuser.
- 3.) Reach down into unit in order to relamp top socket cluster.
- 4.) Place top mesh diffuser back into position and secure with shade screws.

Bottom Cluster

- 1.) Remove ball finial on bottom acrylic diffuser.
- 2.) Carefully push up on bottom acrylic diffuser to loosen.
***THIS IS REMOVABLE*.**
- 3.) Remove bottom diffuser, revealing bottom socket cluster
- 4.) Reach up into unit in order to relamp bottom socket cluster.
- 5.) Place bottom acrylic diffuser back into original position and secure with ball finial.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com