


# RELAMPING INSTRUCTIONS FOR # 05-1141-60 (127487)

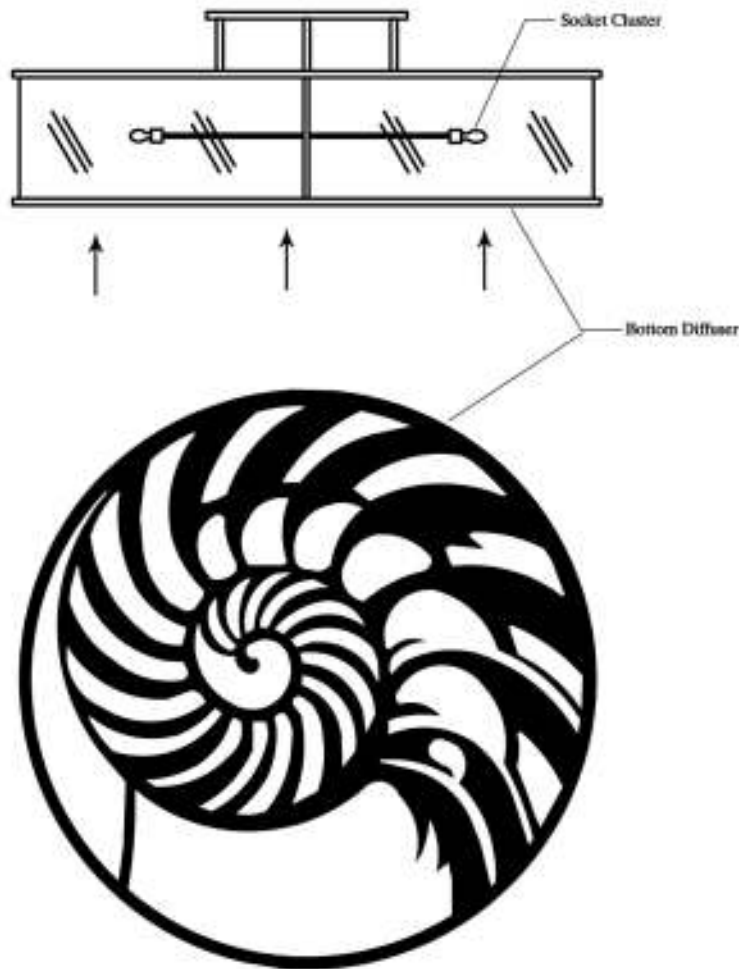

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

\*Note: The bottom diffuser is split into three sections, one relatively larger than the other two.\*

- 1.) Identify the largest section of the bottom diffuser.
- 2.) Carefully push up on large section and remove, revealing socket cluster.
- 3.) Reach up into unit in order to relamp.
- 4.) Place large section back into original position.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)