

MEYDA TIFFANY INSTRUCTIONS FOR # 148123



FIG. 1



FIG. 2



FIG. 3

**CAREFULLY REMOVE
YOUR FLOOR LAMP
FROM THE SHIPPING
BOX, BULBS ARE NOT
INCLUDED.**

1. Your floor lamp may have shifted during shipping, you may need to adjust your lamp. If the lamp looks great don't do anything, you may create an imbalance where there was none. This is what you must do if you need to straighten: You must take two sections at a time and gently rotate the sections in opposite direction of the other until it is sitting center. The sections will not loosen. See FIG. 1
2. Your socket will be in this position during packing, you will need to loosen the socket elbow key by turning it counter clock-wise. Once the socket is facing down, turn adjustment key clockwise to tighten. See FIG. 2
3. If you are turning the sections to tighten them, make sure you keep the socket on the opposite side of where the cord comes out of the base. If the black plastic bushing surrounding the cord where it is connected to the base seems to be sticking out, you can easily push it right back into the base. See FIG. 3



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com