


THIS FIXTURE WEIGHS OVER 50 LBS.

0700 08/20/16

NEC:314.27B, A luminaire that weighs more than 23kg (50lbs.) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM WEIGHT to be supported.

ASSEMBLY INSTRUCTIONS FOR #180016

Fig.1

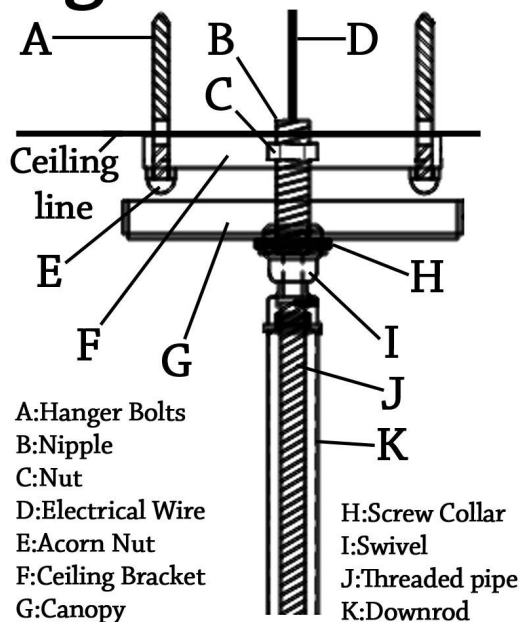

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Steps 1-3 see Fig.1

- 1.) Unscrew the screw collar (H), and allow the canopy (G) to slide down the downrod (K). Position your ceiling bracket (F) and drive your hanger bolts (A) into your ceiling. Be sure to leave enough bolt to accommodate the height of ceiling bracket and acorn nut (E). Screw your nipple (B) into your swivel (I) if not already. Place your ceiling bracket onto the nipple, (which should be screwed into the swivel (I). Secure bracket to nipple with nut (C). You will want to slide canopy up to make sure the top of your ceiling bracket is flush with the top of your canopy.
- 2.) Raise fixture to ceiling and connect electrical wire (D) as per your local electrical code.
- 3.) Slide ceiling bracket up onto the two hanger bolts pointing down from ceiling. Secure bracket to ceiling by screwing acorn nuts onto hanger bolts. Slide canopy up followed by the screw collar, & screw the collar onto the swivel, so that canopy is flush with ceiling.
- 4.) See Fig.2: Attach shades: Slide shades up onto the sockets & secure in place by screwing the socket rings onto sockets.
- 5.) Bulb your fixture, (bulbs provided by others). Power on, enjoy your new fixture!

Fig.2

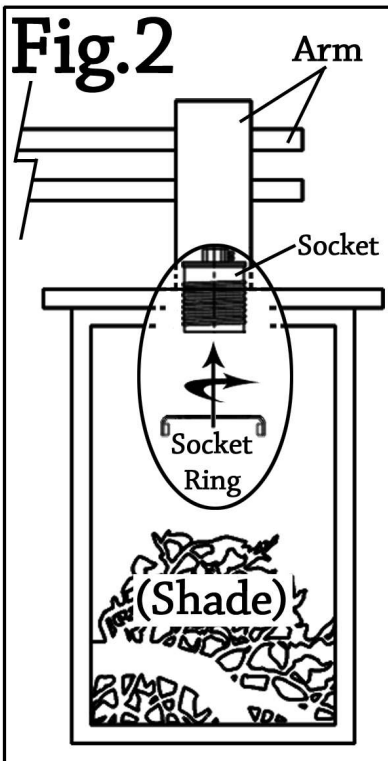

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com