

INSTALLATION INSTRUCTIONS

FOR ITEM 250085 60" WIDE LOXLEY 28 LIGHT TWO TIER CHANDELIER

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

- | | |
|----------------------------|---------------|
| 1. TOP TIER | 4. 8 X CHAIN |
| 2. BOTTOM TIER | 5. 28 X SHADE |
| 3. CANOPY & MOUNTING PLATE | |

Caution:

Fixture is OVERWEIGHT and not suitable for installation with standard Junction Box. Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove the Nuts from Canopy Assembly to release Mounting Plate with Loop and Quick Link. Reserve Nuts for later use.
3. Affix Mounting Plate to ceiling ensuring that connection is suitable to hold a minimum of 150lbs and that Electrical Supply Wires remain accessible.
4. Attach Canopy to studs using Nuts.
5. Following all Local Codes and Procedures, make connection from Fixture Lead Wires to Supply Wires through Wiring lid. Close wiring lid.
6. Attach Top Tier to Chains from Canopy ensuring to align Chains with Wires with Electrical Receptacle on Tier. Make Wire connections.
7. Attach Bottom Tier to Longer Chains ensuring to align Chain with Wires with Electrical Receptacle on Tier. Make Wire connection.
8. Install 28-E12 Base 5Watt Bulbs(not included) into Sockets.
9. Install Shades.
10. Power on and ENJOY!!!

