INSTALLATION INSTRUCTIONS

FOR ITEM 68692 DECO BALL BLUSH SWIRL SEMI-FLUSHMOUNT



CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

- 1. SEMI-FLUSHMOUNT HARDWARE
- 2. GLASS SHADE

Caution:

Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

- 1. Carefully unpack all components and make certain that everything is accounted for.
- 2. Remove Knobs from Canopy to release Universal Crossbar. Reserve Knobs for later use.
- 3. Fasten Universal Crossbar using Customer Supplied Hardware to J-Box with Studs extending down and ensuring that Electrical Supply Wires are accessible.
- 4. Following all Local Codes and Procedures, make electrical connection from Fixture Lead Wires to Structure Supply Wires.
- 5. Lift Semi-Flushmount Hardware up to ceiling allowing Crossbar Studs to protrude through Canopy.

Secure Fixture by screwing reserved Knobs onto Studs until top of Canopy is flush with ceiling.

- 6. Unscrew Ball Finial from bottom of Hardware and remove ONE Vase Cap. Reserve all Parts for later use.
- 7. Install 2 Medium Base 60Watt Bulbs(not included) into Sockets.
- 8. Lift Glass Shade up to Hardware and allow Threaded Nipple to extend through. Secure Shade by replacing reserved Parts as removed.
- Power on and ENJOY!!!

