

ASSEMBLY INSTRUCTIONS FOR #113074 (54268-1)

FIG.A


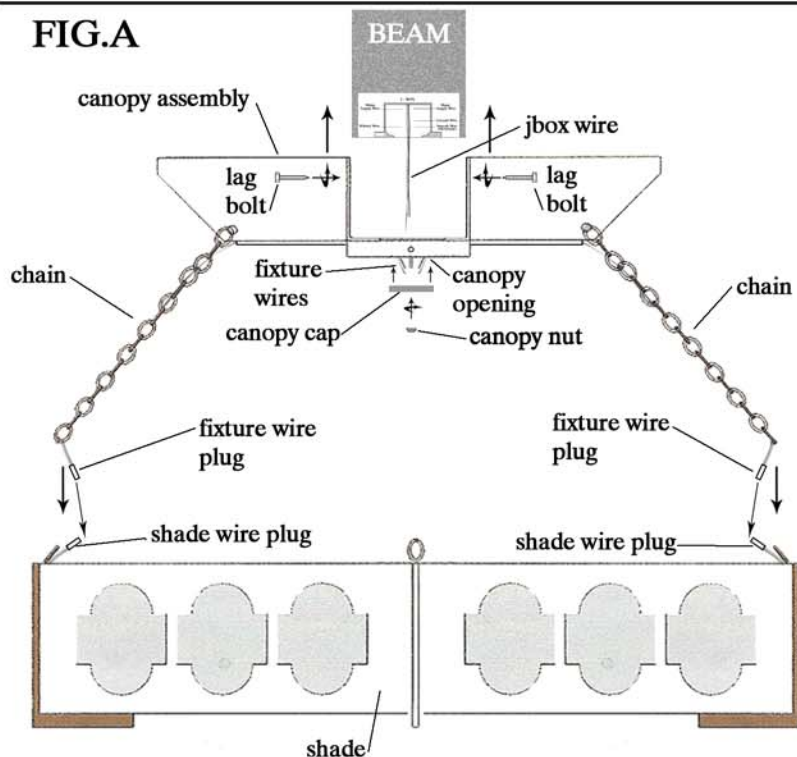


FIG.B

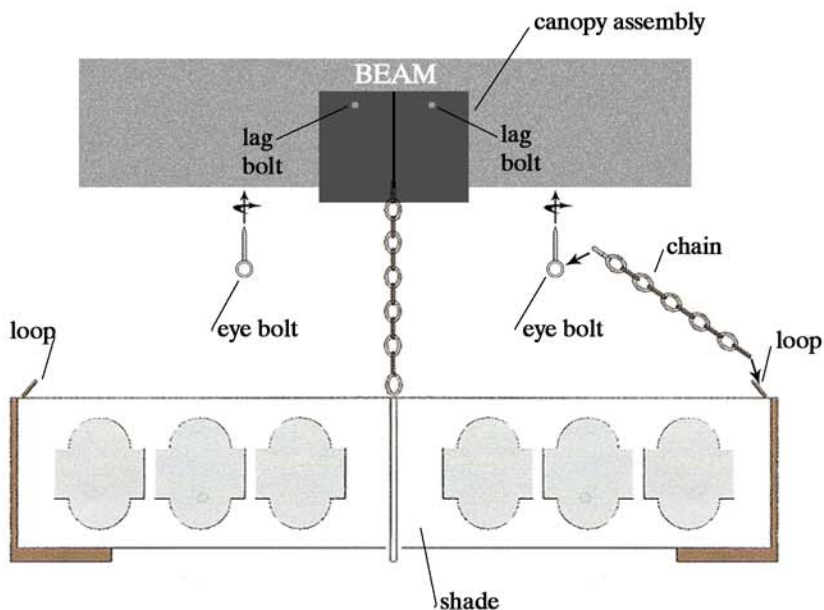

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

1. Remove canopy nut and canopy cap from canopy assembly. FIG.A
 2. Place canopy assembly onto beam, attach with lag bolts. (Make sure that jbox wires are placed through canopy opening).
 3. Wire jbox wires to fixture wires as per local electrical code, place connected wires into canopy opening and cover with canopy cap. FIG.A

4. Place shade up and attach to chains located on canopy assembly. FIG.A
 5. Plug fixture wires to shade wires. FIG.A
 6. Screw eye bolt into beam (MEASURE 14.25" OUT FROM CENTER OF CANOPY ASSEMBLY FOR EYE BOLT PLACEMENT, MAKE SURE EYE BOLT IS CENTERED TO WIDTH OF BEAM). Repeat for remaining eye bolt. FIG.B

7. Attach chains to eye bolts and to shade loops. (IF THESE CHAINS ARE TO LOOSE OR TO TIGHT YOU MUST REMOVE CHAIN AND EITHER SCREW EYE BOLT IN OR OUT FOR PROPER FIT, ALL CHAINS MUST SHARE WEIGHT OF SHADE EQUALLY. FIG.B



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com