

ASSEMBLY INSTRUCTIONS FOR # 141232

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX BEFORE STARTING
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE NOT
INCLUDED

INSTALLATION

NOTE: THIS INSTALLATION REQUIRES 2
PEOPLE.

- 1.) ATTACH UNIVERSL CROSSBAR TO J BOX WITH ADAQUATE FASTENERS (SUPPLIED BY OTHERS)
- 2.) WIRE LIGHT CLUSTER ASSEMBLY ACCORDING TO LOCAL ELECTRICAL CODE.
- 3.) LINE UP CANOPY HOLES WITH CROSSBAR SCREWS .
- 4.) PUSH CANOPY TO CEILING AND SECURE WITH ROUND BRASS CANOPY NUTS
- 5.) CENTER THE RING AND ARM ASSEMBLY WITH THECANOPY AND INSTALL 4 1/4-20 X 2 1/2 HANGER BOLTS AND ACORN NUTS THAT ARE PROVIDED.
- 6.) WHILE HOLDING LOWER FIXTURE RING SECURE 3 ARMS TO APPROPRIATE HOOKS ON RING.
- 7.) SLIDE GLASS BOWL INTO RING AND ATTACH REMAINING ARMS.

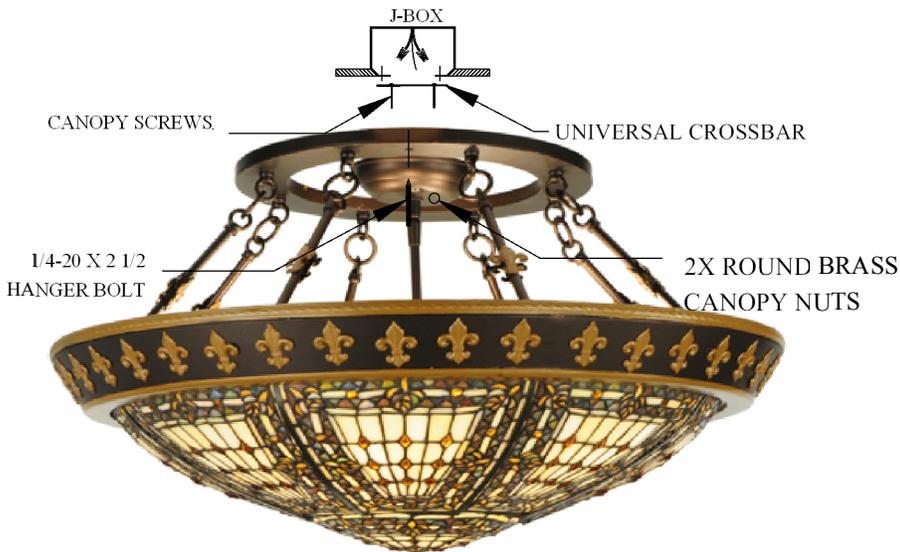

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com