

ASSEMBLY INSTRUCTIONS FOR # 14238

IMPORTANT
TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1.) Attach crossbar to J-box using customer
supplied screws.

2.) Consolidate the two electrical wires
and ground wire protruding out of the
back plate.



3.) Split the brown wires at the ends as
shown.

4.) Wire nut the two positive (smooth)
wires to the black supply wire on the J-box.

5.) Wire nut the two neutral (ribbed) wires
to the white supply wire on the J-box.

6.) Wire nut the one ground wire coming
from the back plate to the ground wire on
the J-box.

7.) Attach back plate to crossbar using
back plate screws provided.

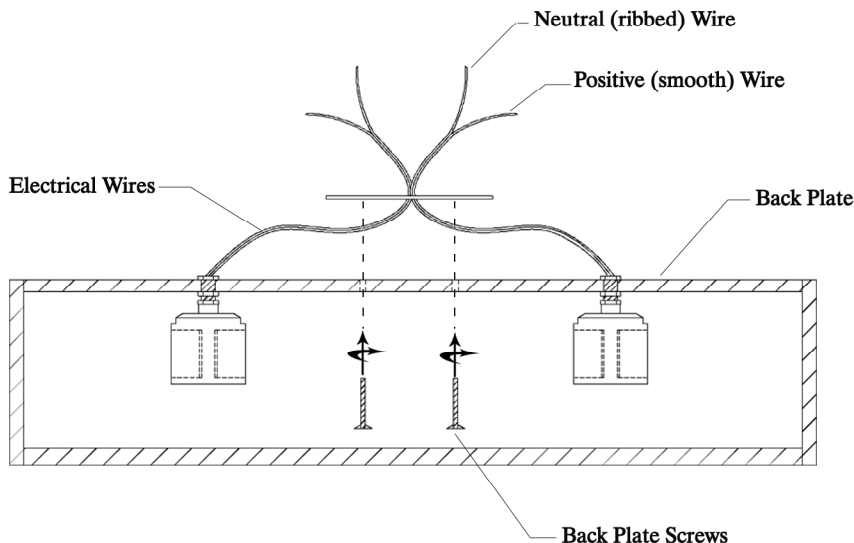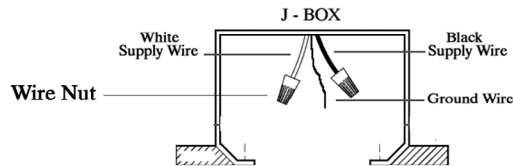

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com