


ASSEMBLY INSTRUCTIONS FOR #142776

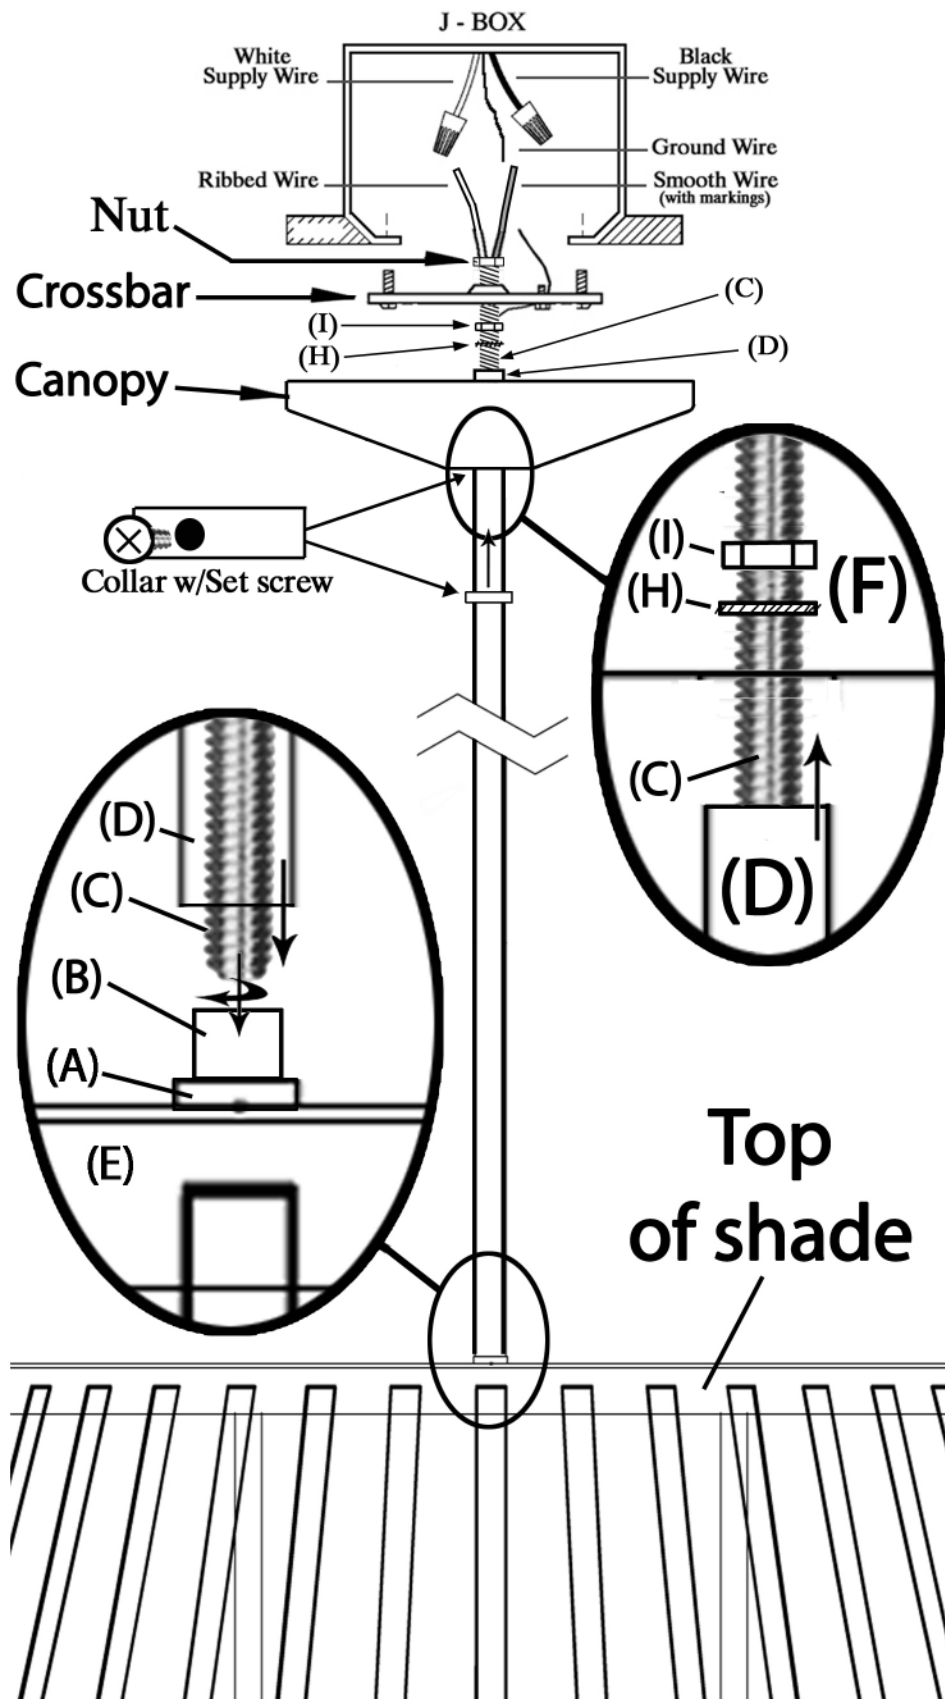

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1.) Assemble the stem:

1a.) On top of your shade (E) there should be a check ring (A) followed by a coupler (B). Take your threaded rod (C) Feed the wires through the rod, and then screw into coupler. Slide your stem sleeve (D) onto the threaded rod. Slide collar w/set screw onto sleeve followed by canopy. These can rest above the shade.

1b.) There should be some threaded rod jutting above the sleeve. Place your spider washer (H), and then nut (I) onto threaded rod. Follow this with your crossbar.

2.) Attach crossbar to ceiling or J-box.

3.) Connect all electrical wires as per local codes.

4.) Slide canopy up to ceiling and secure in place with the collar w/set screw.

Screw your set screw in.

5.) Bulb your fixture, power on, enjoy.

6.) If you need to make any adjustments to height, keep in mind the stem and threaded rod are two different lengths.

So cut the same amount off of both & you will have the same difference in length.

7.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com