

ASSEMBLY INSTRUCTIONS FOR #47596 (M86-MS220-24-2)

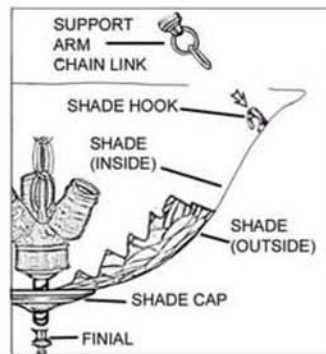
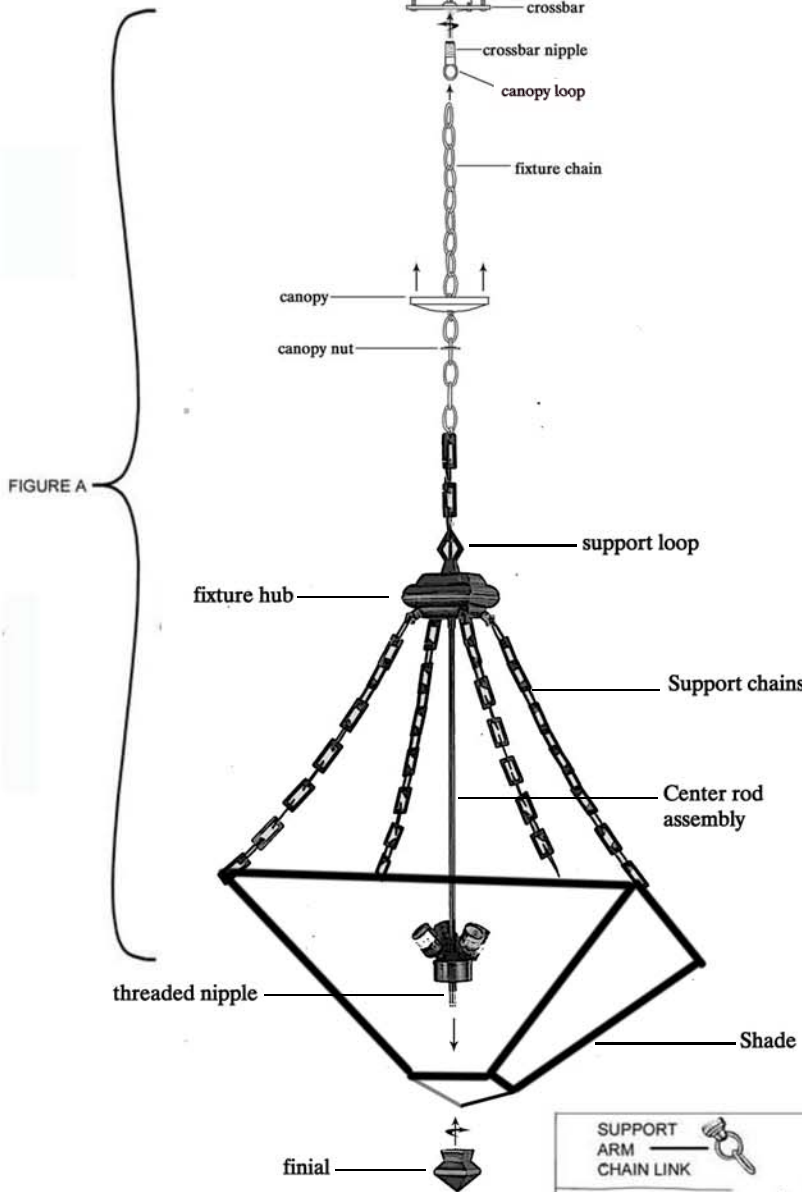
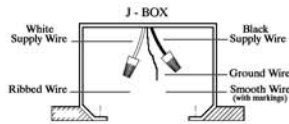


FIGURE B

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Turn off power to j-box.
2. Assemble fixture as shown in FIG.A:
3. Install assembled fixture FIG.A to ceiling. Pull fixture wire w/ground wire through crossbar nipple carefully. (Follow procedure shown in electrical connections instructions) NOTE: This fixture is custom fitted to ea. shade. there will be fine adj. you will be required to make.
4. Attach support chains (4) to shade hooks (4) FIG.B. Place center rod assembly (threaded nipple) through hole in center of shade cap. FIG.B. Attach finial. NOTE: Weight of shade must be on center rod assembly only. Arm assembly are for balance of shade only.
5. Screw finial up or down to fine tune tension of arm assembly.

ELECTRICAL CONNECTIONS:

1. Cut excess wire ABOVE crossbar to 6'. Split the wire into 2 separate leads. Strip 1" of plastic insulator from the ends of each lead.
2. Connect the half of wire w/the ribbed surface to the white wire of the supply box. Connect the smooth half of wire (the half w/markings) to the black wire of the supply box. connect the bare copper Ground wire to the green screw of the crossbar. Use UL listed wire connectors suitable for the size, type and number of conductors. No loose strands or loose connections should be present. Secure wire connectors w/ electrical tape.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com