


ASSEMBLY INSTRUCTIONS FOR 65853 (51591-1)

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar (crossbar, hanging bracket & light cluster are one complete unit) to J box.
2. Wire as per local electrical code.
3. Place light bulbs into sockets.
4. Place shade hanging rods onto hanging bracket hooks as shown.

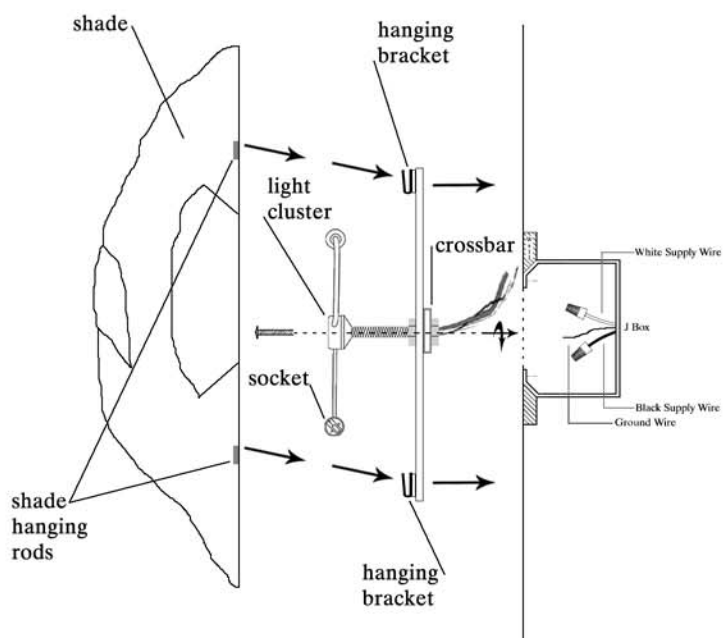

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com