


# ASSEMBLY INSTRUCTIONS FOR #66238 (M300/32)

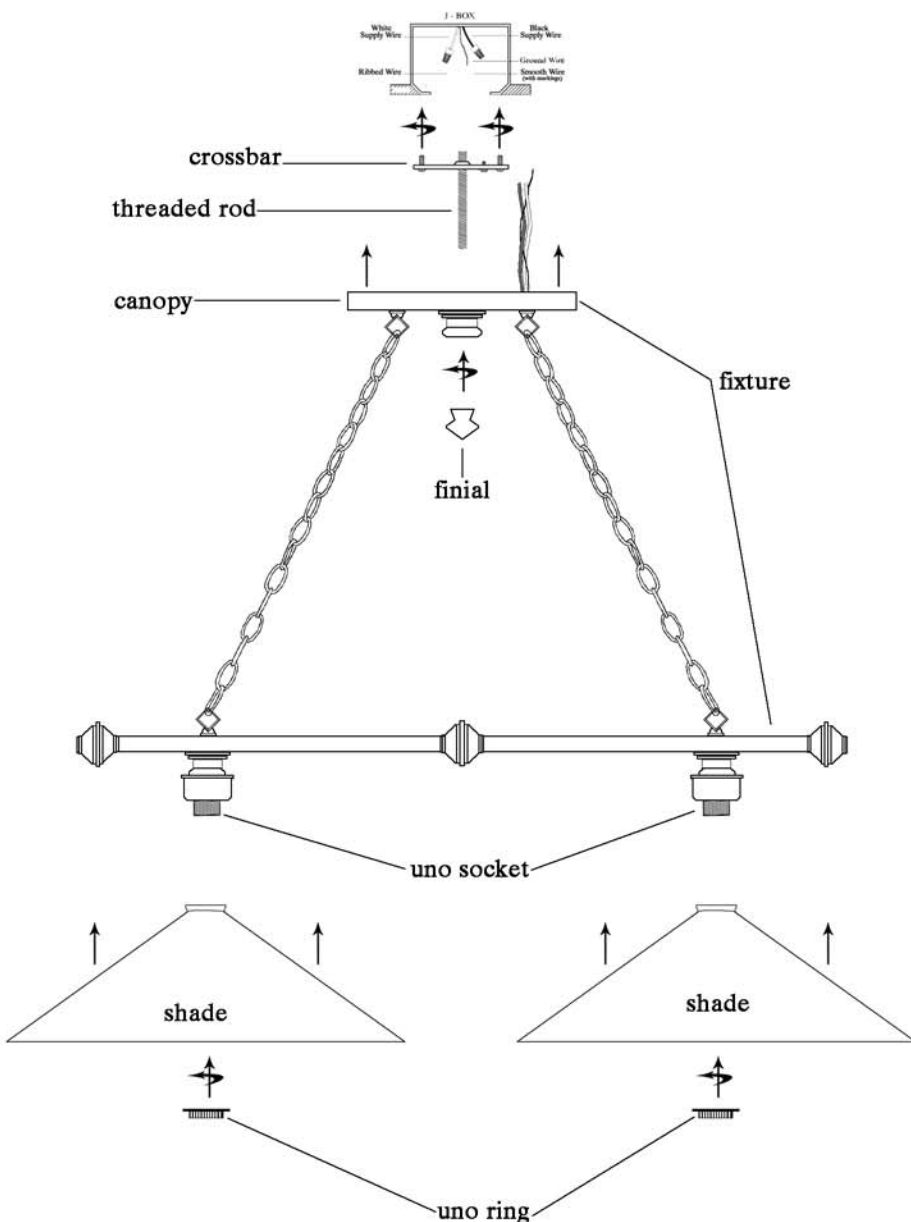

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with threaded rod to j box.
2. Place fixture onto threaded rod and attach finial to threaded rod ( do not tighten fixture to ceiling, leave room to wire fixture wires to j box wires).
3. Wire as per local electrical code.
4. Tighten fixture/canopy to ceiling.
5. Place shade onto uno socket and seat to shade fitter.
6. Screw uno ring onto uno socket and tighten to shade.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)