


# ASSEMBLY INSTRUCTIONS FOR 98910 (Q14-08-9004-QSSC4-37)

**IMPORTANT**  
TURN OFF THE POWER AT THE MAIN  
FUSE OR CIRCUIT BREAKER BOX  
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

1. Screw threaded rod into crossbar, screw crossbar nut onto threaded rod and to crossbar.
2. Screw crossbar to j-box.
3. Wire as per local electrical code.
4. Place back plate onto threaded rod, screw back plate nut onto threaded rod and tighten to back plate.
5. Screw light bulb into socket.
6. Place rubber washer onto post A, place shade onto post A, screw fixture nut onto post A and tighten (DO NOT OVER TIGHTEN).

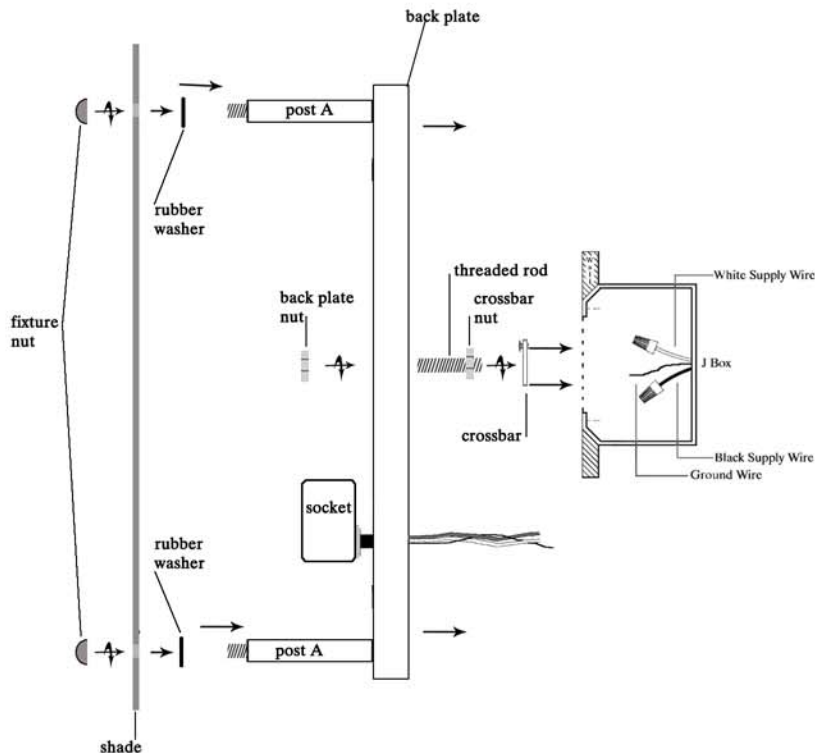

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)