



ASSEMBLY INSTRUCTIONS FOR (QGL1SCB-04-)

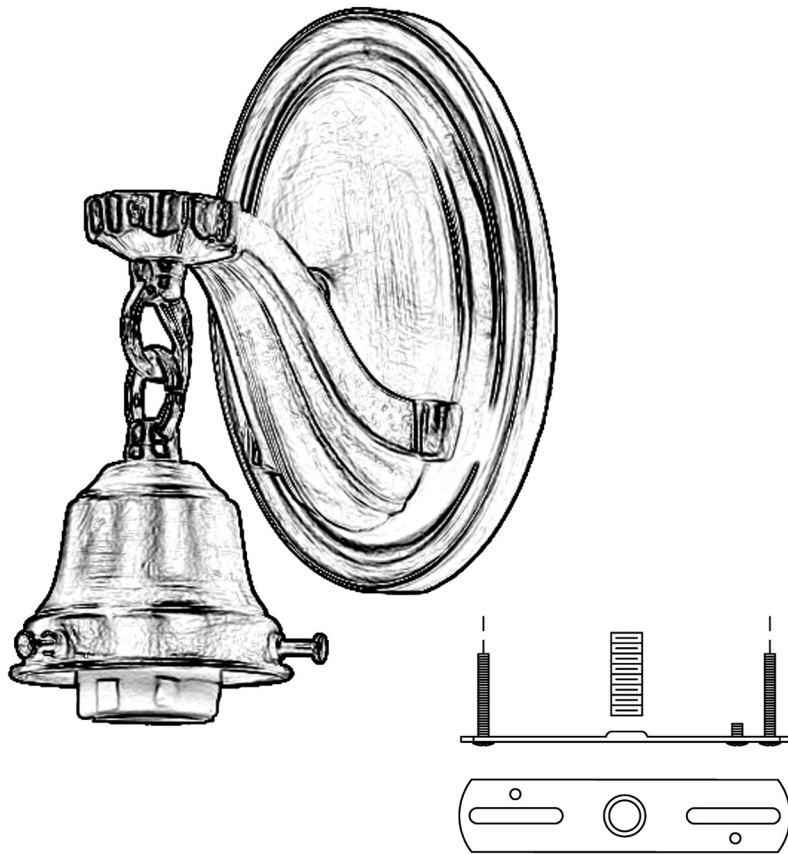

AA-720	STAMPED BRASS BA	1
A-4356	CAST SCONCE ARM	1
A-153	2.25" FITTER WIT	1
A-3034	KEYLESS SHORT SO	1
a-2901	BRASS LOOP W/WIR	2
L	ASSEMBLY LABOR	20
A-4113	18" GROUND WIRE/	1
A-2894	BRASS THUMB SCRE	3
90/390	SPIDER WASHER	2
--493	250' BROWN WIRE	1
90-283	1" NIPPLE	2
CB-22	CROSS BAR 5-7/8"	1
HBA106	5/8" HALF BALL B	1
90-1008	2 1/8"X1/8 IP NI	1

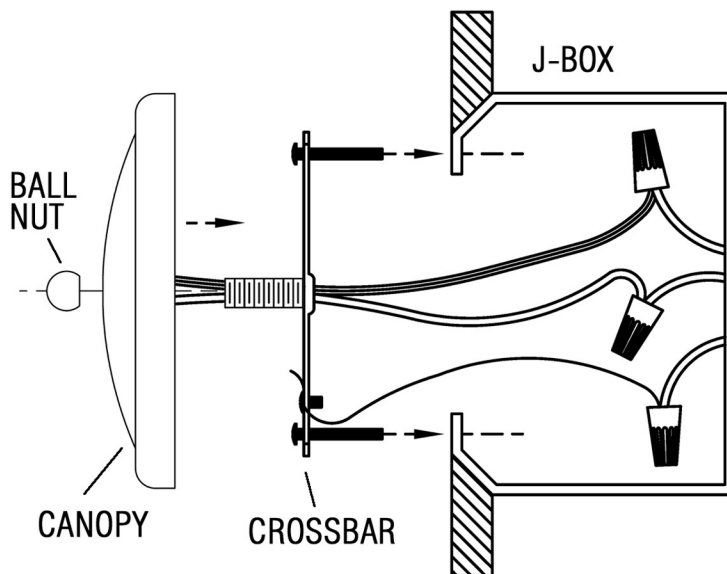

IMPORTANT

TURN OFF THE POWER AT THE
MAIN FUSE OR CIRCUIT BREAKER
BOX BEFORE
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Remove crossbar from sconce plate. (save ball nut).
2. Attach crossbar to J-BOX using screws provided.
3. Wire sconce to J-BOX per local electrical code. Do not run wire through nipple/center of crossbar!
4. Slide sconce canopy over nipple attached to crossbar and secure against wall using ball nut that had been removed in step 1.
5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com