



ASSEMBLY INSTRUCTIONS FOR (QGL2SCE-09-)

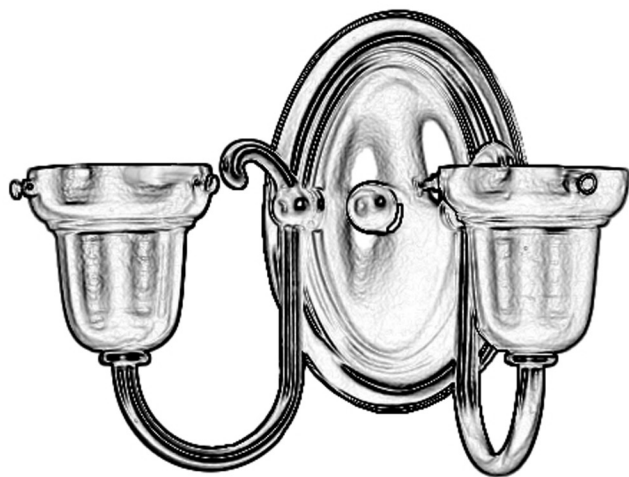


QGL2SCE-09-

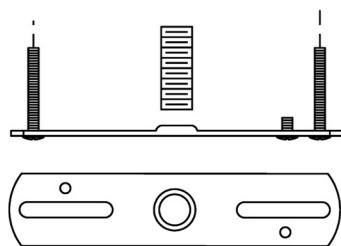

9" WIDE WALL SCONCE
WITH 2.25" FITTERS

ATTACH GLASS SHADES
INTO FITTERS
WITH THUMBSCREWS
PROVIDED

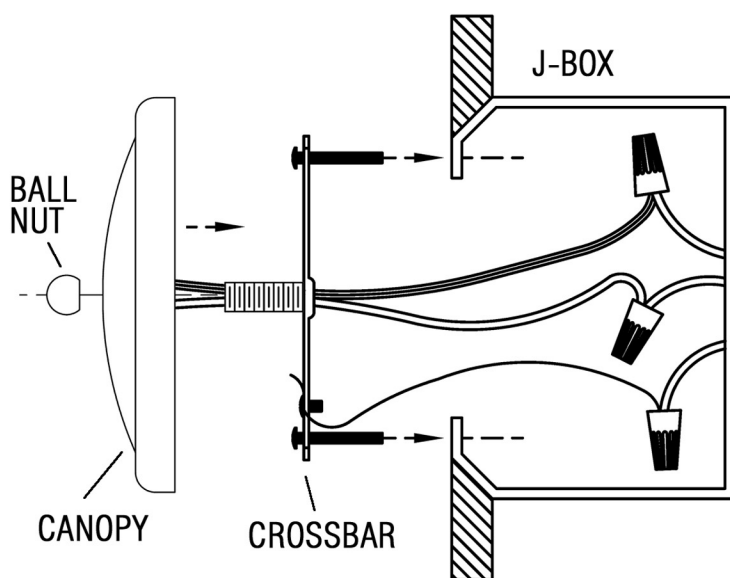

IMPORTANT

TURN OFF THE POWER AT THE
MAIN FUSE OR CIRCUIT BREAKER
BOX BEFORE
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Remove crossbar from sconce plate.
(save ball nut).
2. Attach crossbar to J-BOX using
screws provided.
3. Wire sconce to J-BOX per local
electrical code. Do not run wire
through nipple/center of crossbar!
4. Slide sconce canopy over nipple
attached to crossbar and secure
against wall using ball nut that had
been removed in step 1.
5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com