


ASSEMBLY INSTRUCTIONS FOR #101787 (864-2-M130)

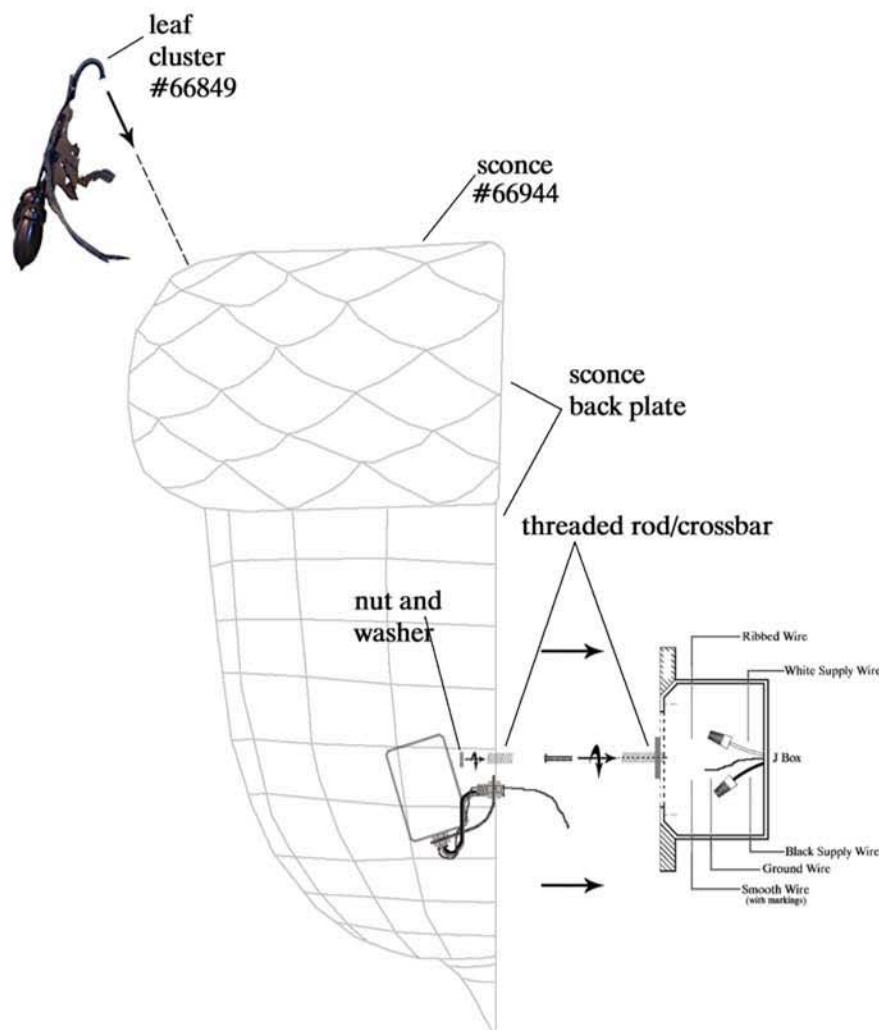

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove nut and washer from threaded rod/crossbar located on inside of scone back plate. Save nut and washer for reattachment.
2. Screw threaded rod/crossbar into J box with screws provided.
3. Wire scone elec. wires to J box elec. wires as per local electrical code.
4. Place scone onto threaded rod/crossbar and attach with nut and washer that had been removed in step one.
5. Hang leaf clusters onto front edge of scone as shown





"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

CUT SHEET, ITEM #101787

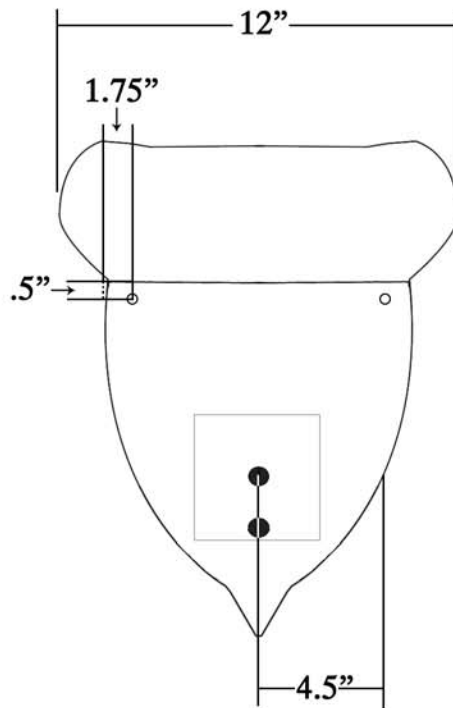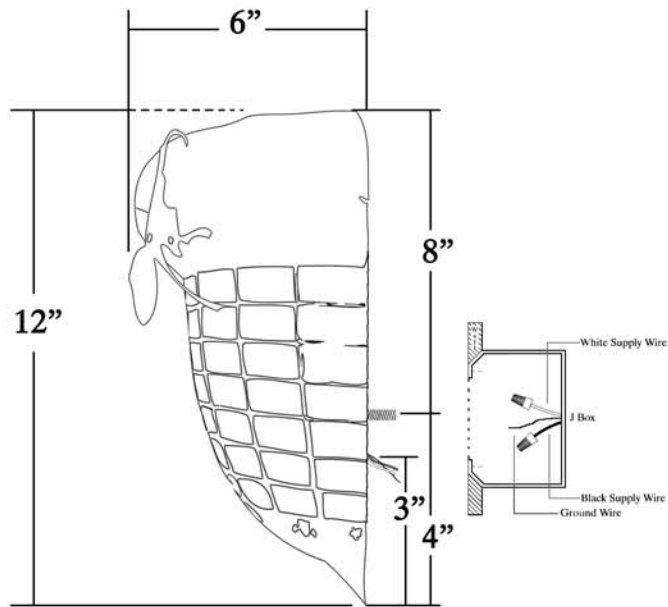

DRAWN BY 244		WEIGHT		DATE 10/16/09		© MEYDA TIFFANY, INC. © DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION									
VOLTAGE 110		GLASS COLOR BEIGE,ROOTBEER				BULB # 1		DISCRIPTION ACORN WALL SCONCE				PROJECT NUMBER			
FINISH PATINA		TYPE MEDIUM				DESIGN NUMBER 864-2-M130									
MATERIAL GLASS,BRASS		WATT 100				FIXTURE TYPE WALL SCONCE				FINAL MODEL NUMBER 101787					