


# ASSEMBLY INSTRUCTIONS FOR 101803 (SG319-07R-1-M91)

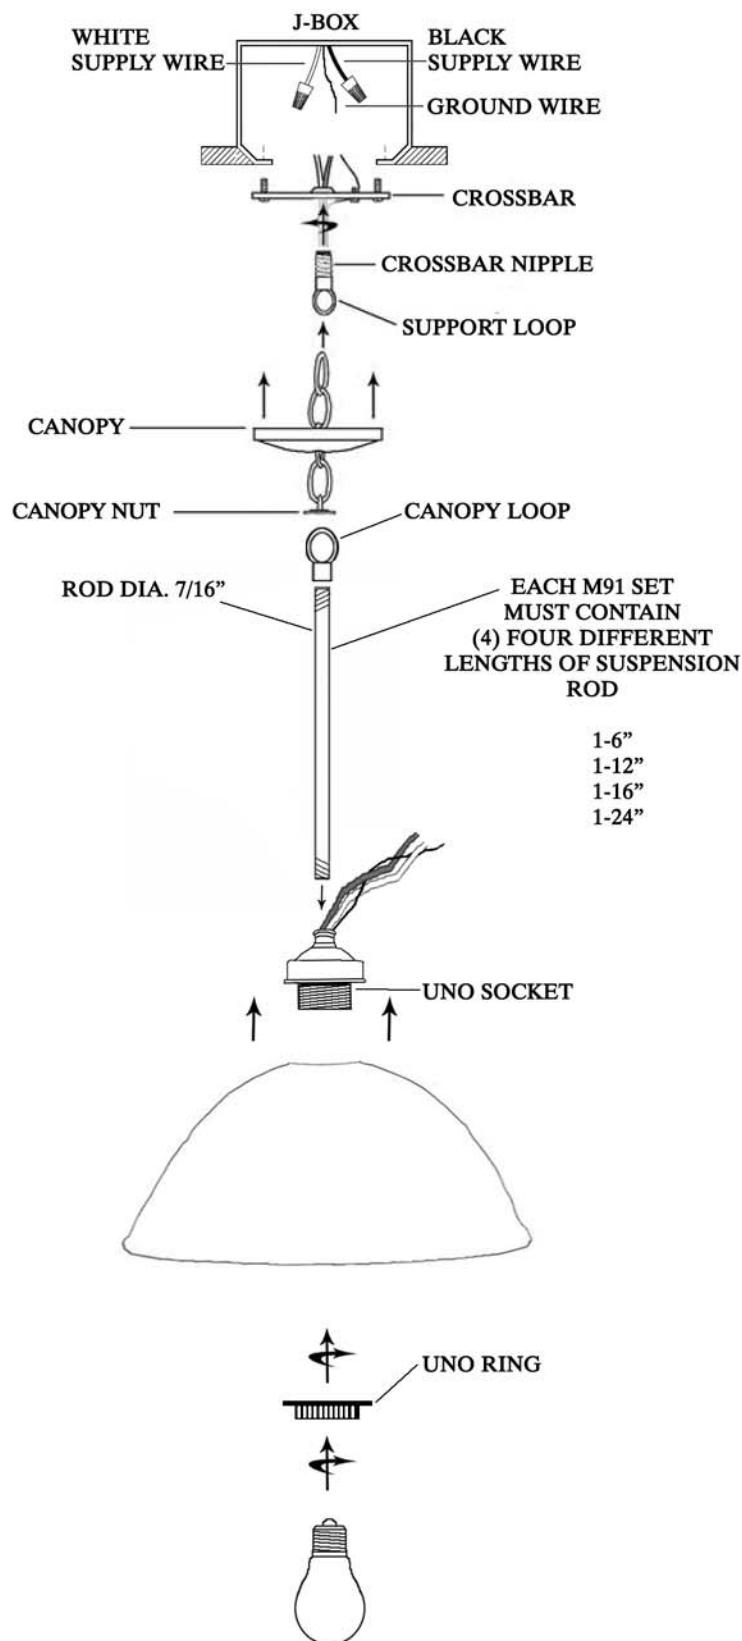

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar to J-box.
2. Place fixture electrical cords through fixture rod, fixture loop, one link of chain, support loop, canopy nut, and crossbar.
3. Wire as per local electrical code.
4. Screw fixture rod to fitter, screw fixture loop to fixture rod screw support loop to crossbar.
5. Slide canopy up to ceiling.
6. Slide canopy nut up and screw onto support loop, tighten to canopy.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)