

ASSEMBLY INSTRUCTIONS FOR (QCFWH-)

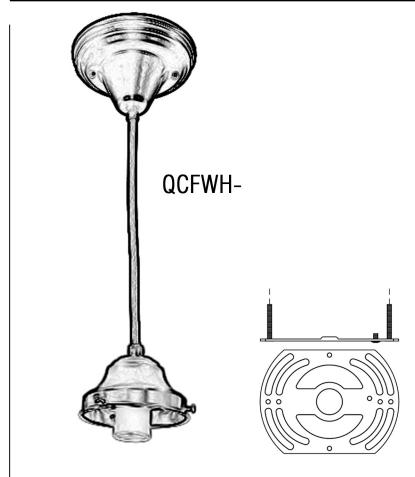

CLOTH COVERED PADDLE SOCKET HANGER WITH 4" FITTER

ATTACH GLASS SHADE INTO FITTER WITH 3 THUMBSCREWS **PROVIDED**

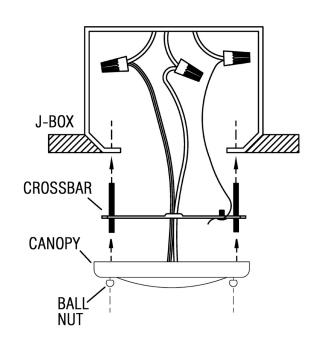

IMPORTANT
TURN OFF THE POWER AT THE
MAIN FUSE OR CIRCUIT BREAKER
BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Remove crossbar from sconce plate. (save ball nuts and threaded studs).
- 2. Attach crossbar to J-BOX using studs removed from sconce.
- 3. Wire sconce to J-BOX per local electrical code.
- 4. Slide sconce canopy over studs attached to crossbar and secure against ceiling using ball nuts that had been removed in step 1.
- 5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"