


## ASSEMBLY INSTRUCTIONS FOR (QGL1SCA-04-)

4" WIDE WALL SCONCE  
WITH 2.25" FITTER

ATTACH GLASS SHADE  
INTO FITTER  
WITH 3 THUMB-  
SCREWS PROVIDED

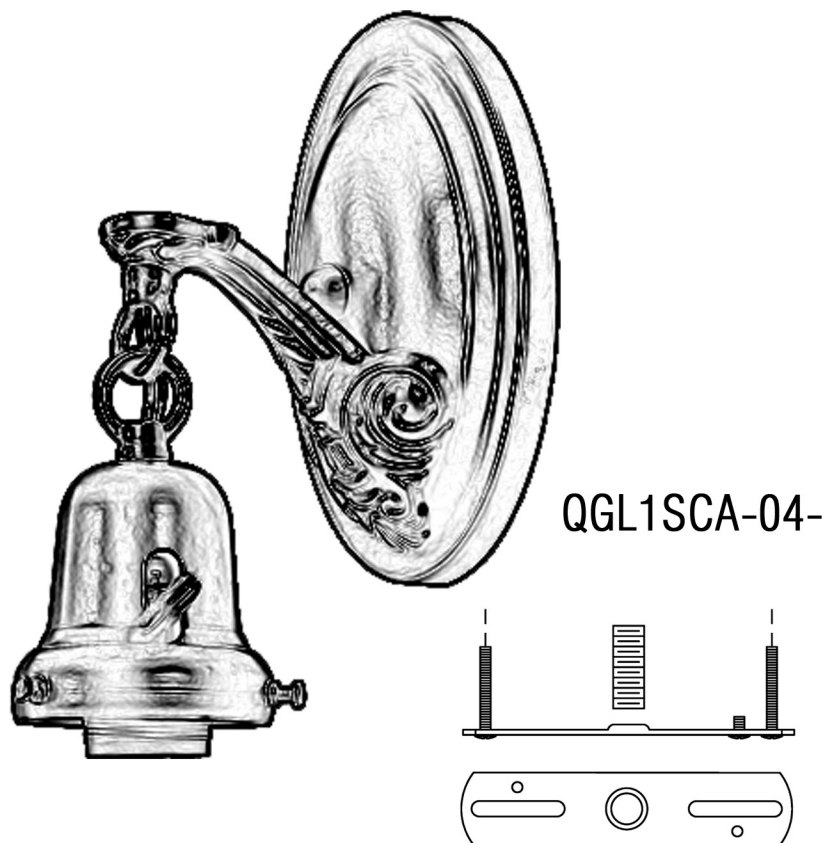


### IMPORTANT

TURN OFF THE POWER AT THE  
MAIN FUSE OR CIRCUIT BREAKER  
BOX BEFORE  
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE  
NOT INCLUDED

1. Remove crossbar from sconce plate.  
(save ball nut).
2. Attach crossbar to J-BOX using  
screws provided.
3. Wire sconce to J-BOX per local  
electrical code. Do not run wire  
through nipple/center of crossbar!
4. Slide sconce canopy over nipple  
attached to crossbar and secure  
against wall using ball nut that had  
been removed in step 1.
5. Turn power on to J-Box

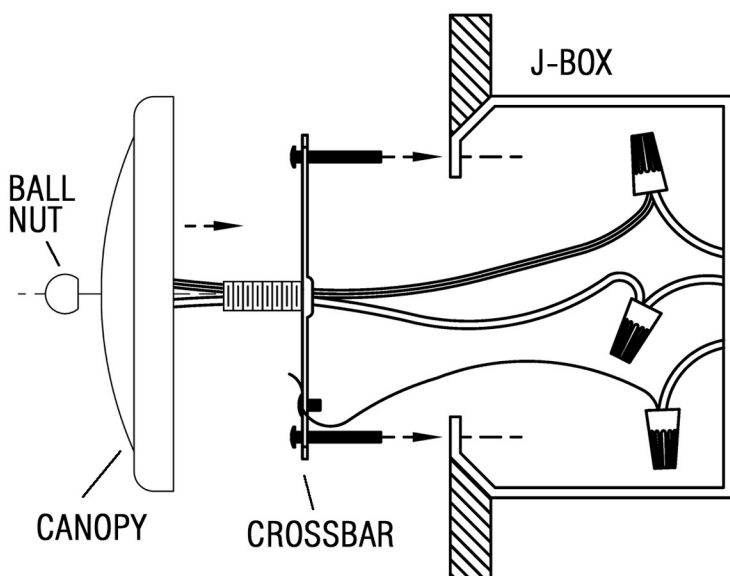

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)