


27" WIDE 6 ARM CHANDELIER WITH 2.25" FITTERS

ATTACH GLASS SHADES INTO FITTERS WITH THUMBSCREWS **PROVIDED**

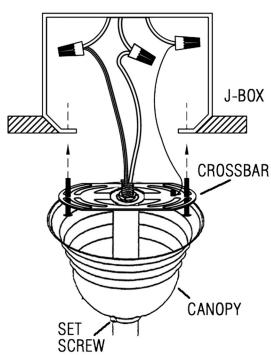

IMPORTANT
TURN OFF THE POWER AT THE
MAIN FUSE OR CIRCUIT BREAKER
BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE **NOT INCLUDED**

- 1. Loosten set screw and slide canopy as far up tube/neck as possible.
- 2. Attach crossbar to J-BOX using screws provided.
- 3. Wire sconce to J-BOX per local electrical code.
- 4. Slide canopy back down tube/neck over crossbar tightly against ceiling. Secure by tightening set screw.
- 5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"