


ASSEMBLY INSTRUCTIONS FOR 105221 (TR839-08R-1 M92)

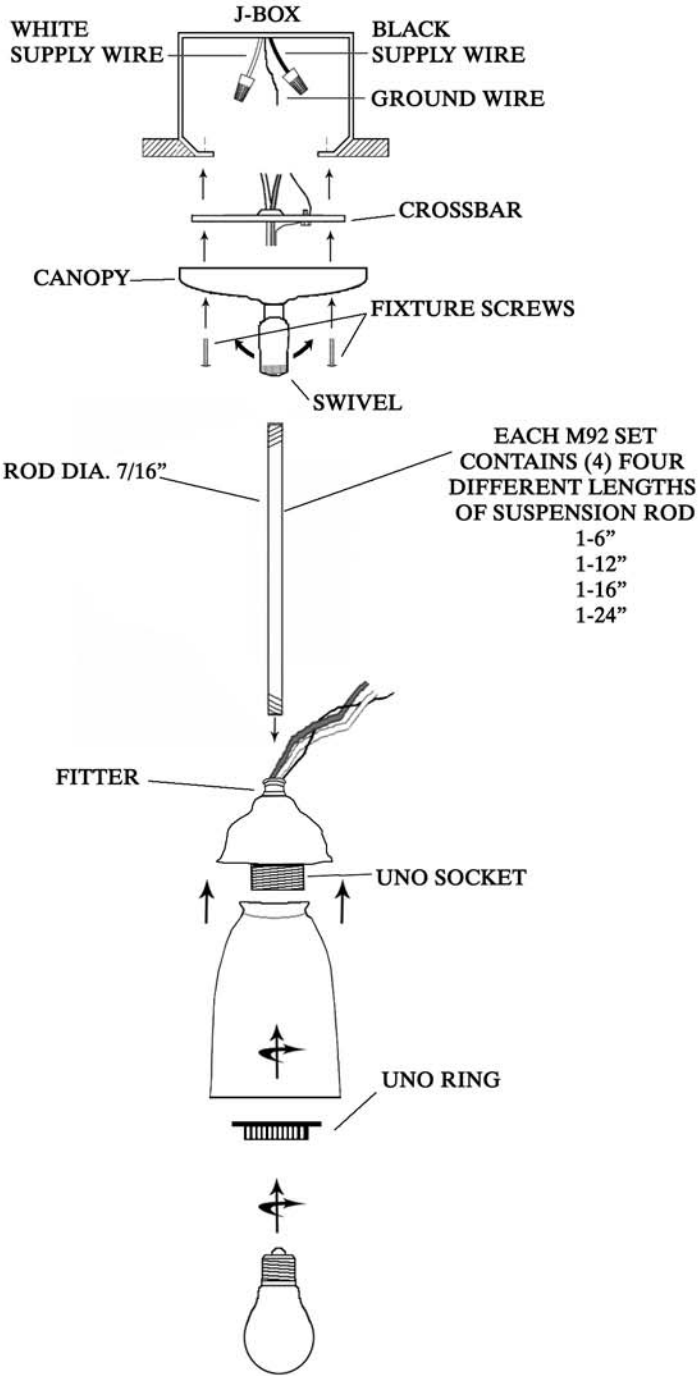


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place fixture electrical cords through fixture rod, swivel connector, canopy, and crossbar.
2. Wire as per local electrical code
3. Screw fixture rod to fitter, screw swivel connector to fixture rod,
4. Screw fixture screws through canopy onto crossbar and onto J-box.

SWIVEL CONNECTOR

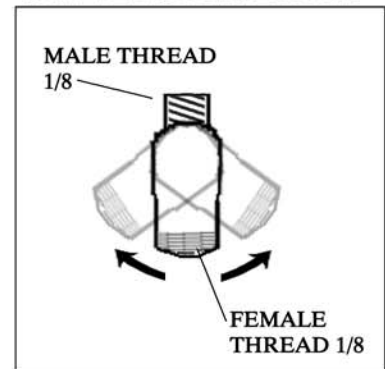

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com