
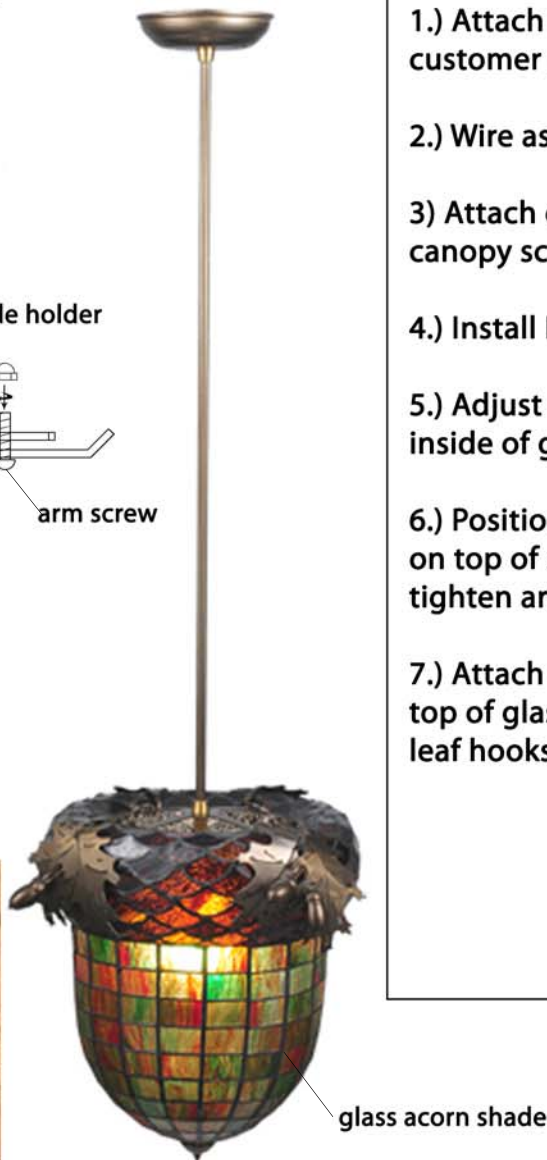


# ASSEMBLY INSTRUCTIONS FOR #107367

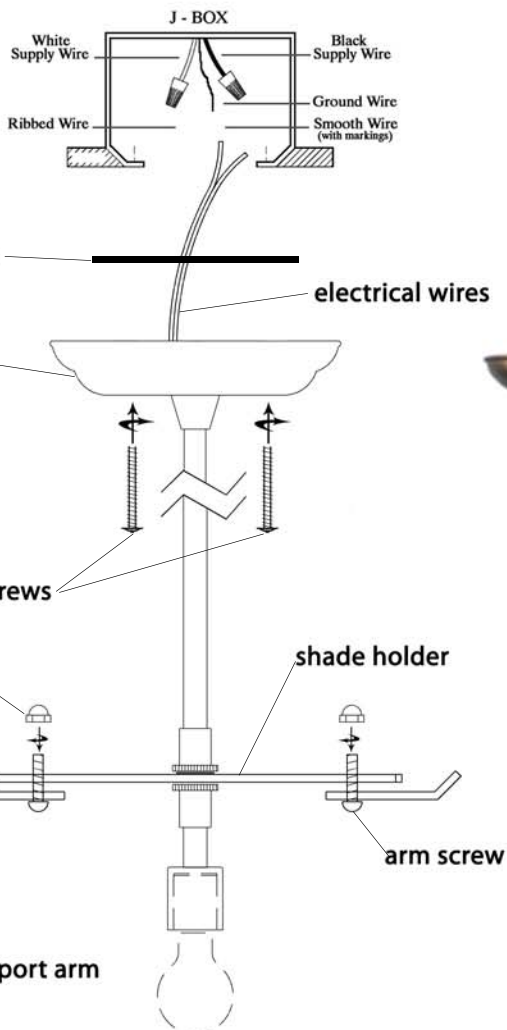

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to j-box using customer provided screws.
- 2.) Wire as per local electrical codes.
- 3) Attach canopy to crossbar using canopy screws, provided.
- 4.) Install Light bulb.
- 5.) Adjust slotted support arms to fit inside of glass acorn shade.
- 6.) Position glass acorn shade to rest on top of slotted support arms and tighten arm nuts onto arm screws.
- 7.) Attach oak leaves as desired around top of glass acorn shade using the leaf hooks.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)