

ASSEMBLY INSTRUCTIONS FOR # 107421 (Q6-10-4003-QWCC-6)

FIG.A

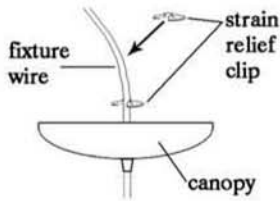


FIG.B


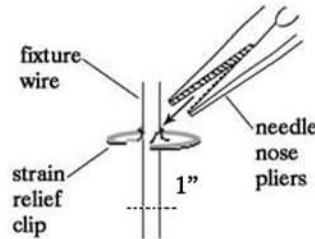


FIG.C

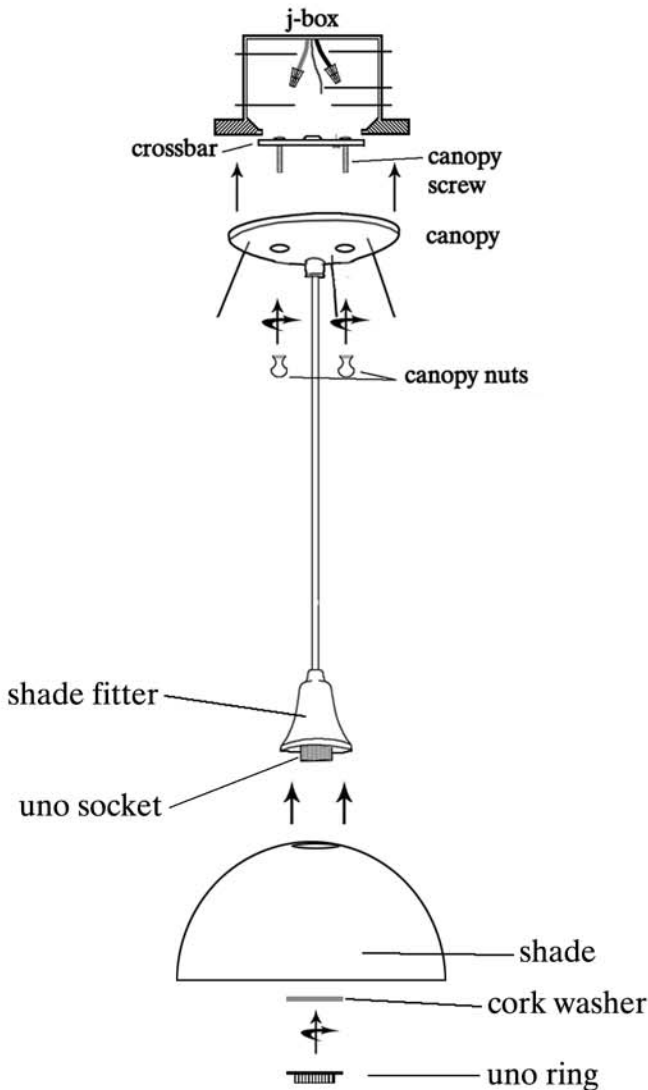

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Thread fixture wire through canopy, determine the over all length of fixture from ceiling to the bottom of shade.
2. Add 1" to pre determined fixture wire length and place strain relief clip onto wire at this location. FIG.A
(Be Sure To Leave A Minnium Of 6" Of Wire Above This Location For Attachment To Jbox Wires).
3. Using needle nose pliers crimp strain relief clip onto fixture wire. FIG.B
4. Screw crossbar onto j-box, make sure canopy screws protrude downward from crossbar so that when canopy is placed to ceiling 1/4" of thread is exposed from canopy. FIG.C
5. Wire as per local electrical code.
6. Place canopy/fixture onto canopy screws and attach with canopy nuts. FIG.C
7. Place shade into shade fitter, place cork washer onto uno socket and secure with uno ring. FIG.C



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com