

ASSEMBLY INSTRUCTIONS FOR

109616 (1124-1-M1-3)

FIG.A


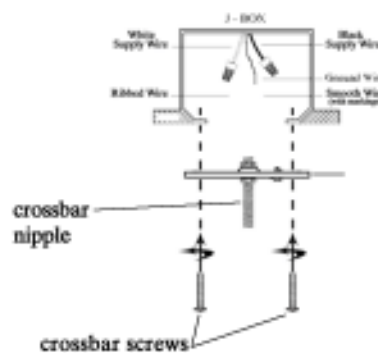


FIG.B

**IMPORTANT**

TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

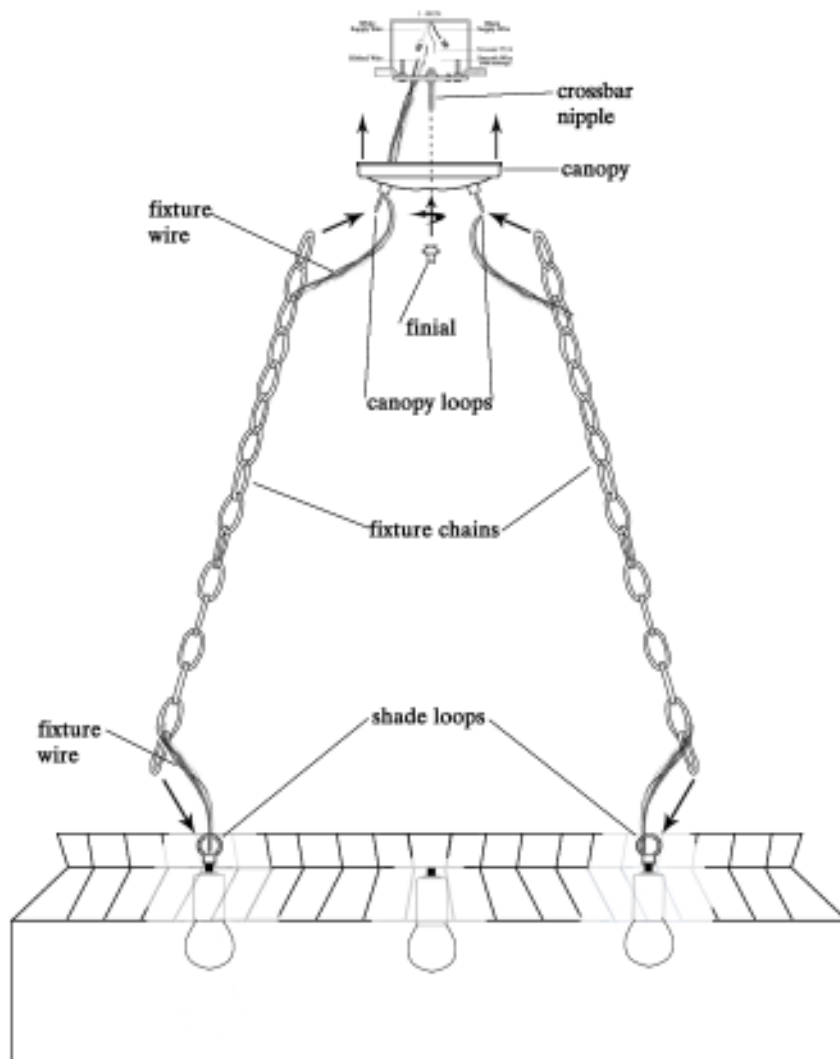

DO NOT REMOVE CANOPY
LOOPS OR REINFORCEMENT
PLATE FROM CANOPY

— THIS IS A 2 PERSON JOB —

1. Attach crossbar to jbox. FIG.A
2. Attach fixture chains to shade loops and canopy loops. FIG.B
3. Place fixture wire through fixture chain and canopy. FIG.B
4. Wire as per local electrical code.
5. Place canopy (with fixture) onto crossbar nipple to ceiling, screw finial onto crossbar nipple and tighten to canopy. FIG.B



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com