


ASSEMBLY INSTRUCTIONS FOR #109695 (13129-1)

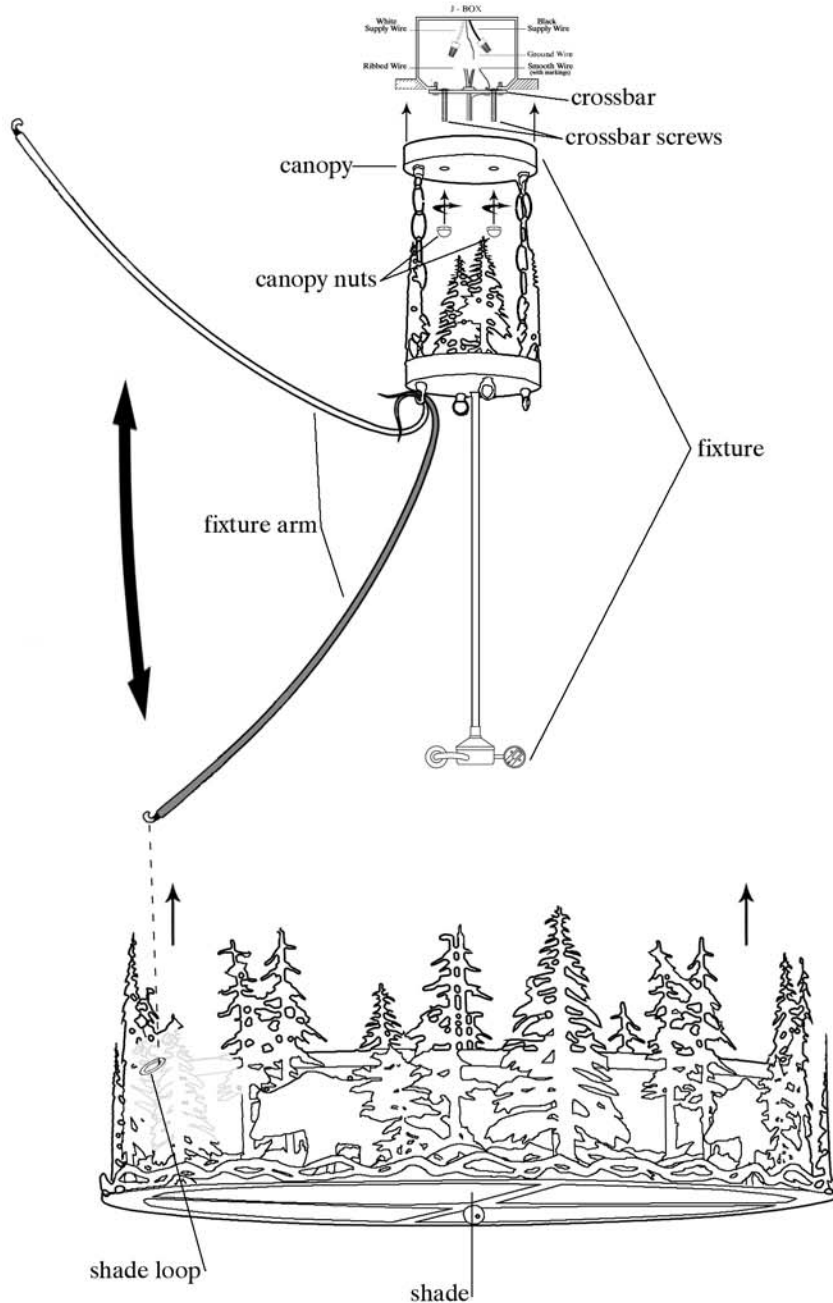

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j box.
2. Wire as per local electrical code.
3. Place fixture up and onto crossbar screws, attach with canopy nuts and tighten to canopy.
4. Place fixture arms into hub loops as shown.
5. Attach shade loops to fixture arms.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com