
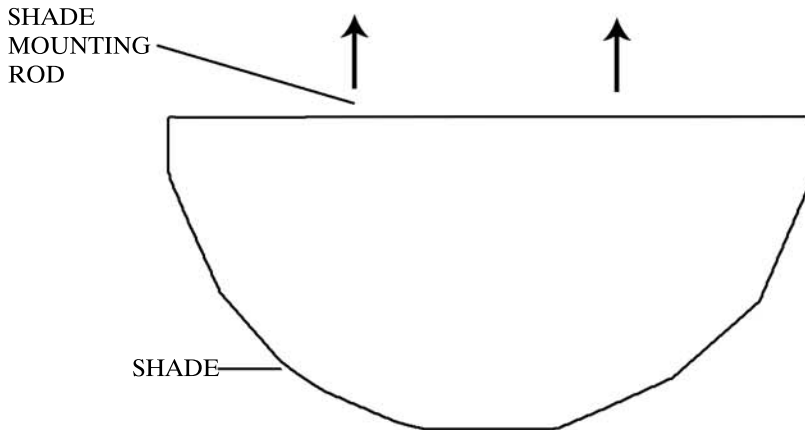
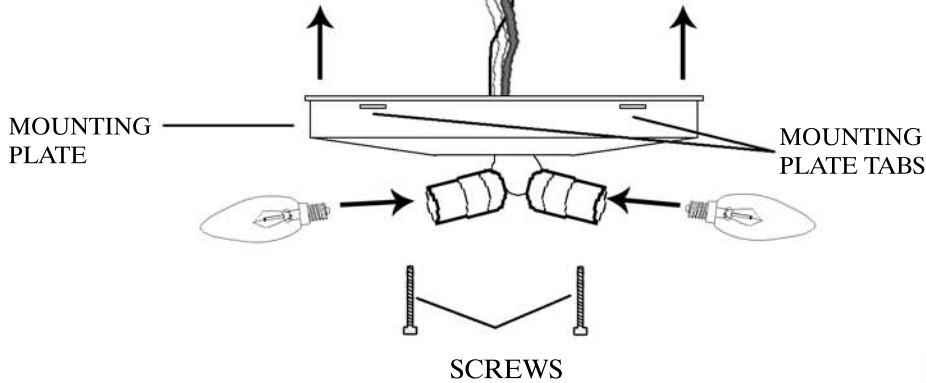


ASSEMBLY INSTRUCTIONS FOR 11055 (SG373-13SC-1)

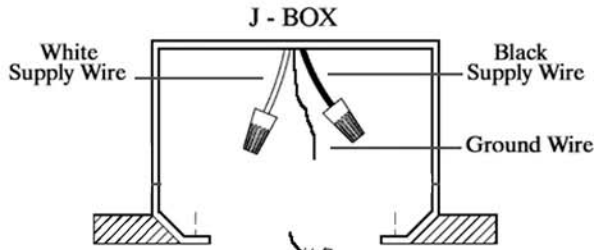

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Turn power off to J-box.
2. Wire sconce mounting plate to J-box wires as per local electrical code
3. Screw mounting plate to J-box. and tighten.
4. Place shade mounting rod onto mounting plate tabs.
5. Screw bulbs (2) into sockets.
6. Turn power on to J-box.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com