
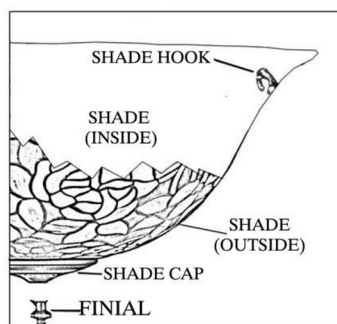


ASSEMBLY INSTRUCTIONS FOR #111560 (tr844-24-1-M71-27)

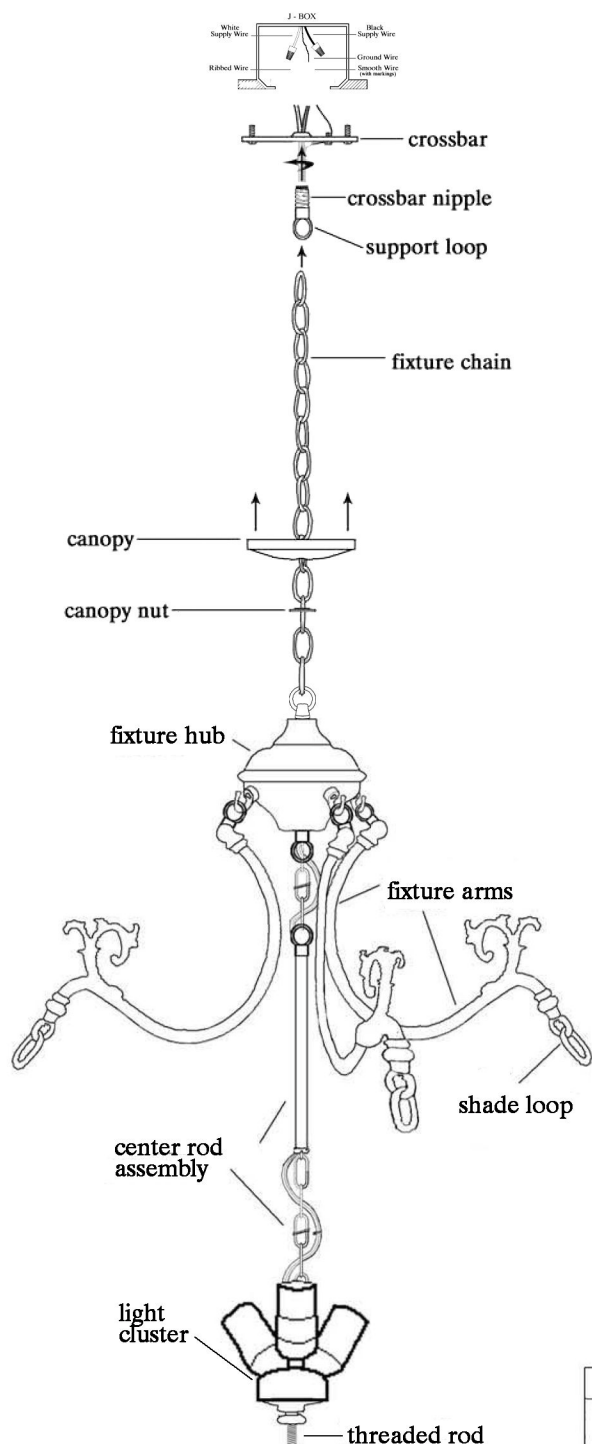

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Attach crossbar with crossbar nipple and support loop to j box.**
 - 2. Attach fixture chain to hub loop, place canopy nut than canopy onto fixture chain, attach fixture chain to support loop.**
 - 3. Wire as per local electrical code.**
 - 4. Place fixture arms onto hub hooks.**
 - 5. Attach shade loops onto shade hooks.**
 - 6. Place light cluster threaded rod through shade cap, attach finial to threaded rod.**
- NOTE: Weight of Shade must be on Center Rod Assembly Only. Arm Assembly is for Shade balance only.**
- 7. Screw finial up or down to fine tune tension of fixture arms.**



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com