


# ASSEMBLY INSTRUCTIONS FOR #111816 (31725-3)

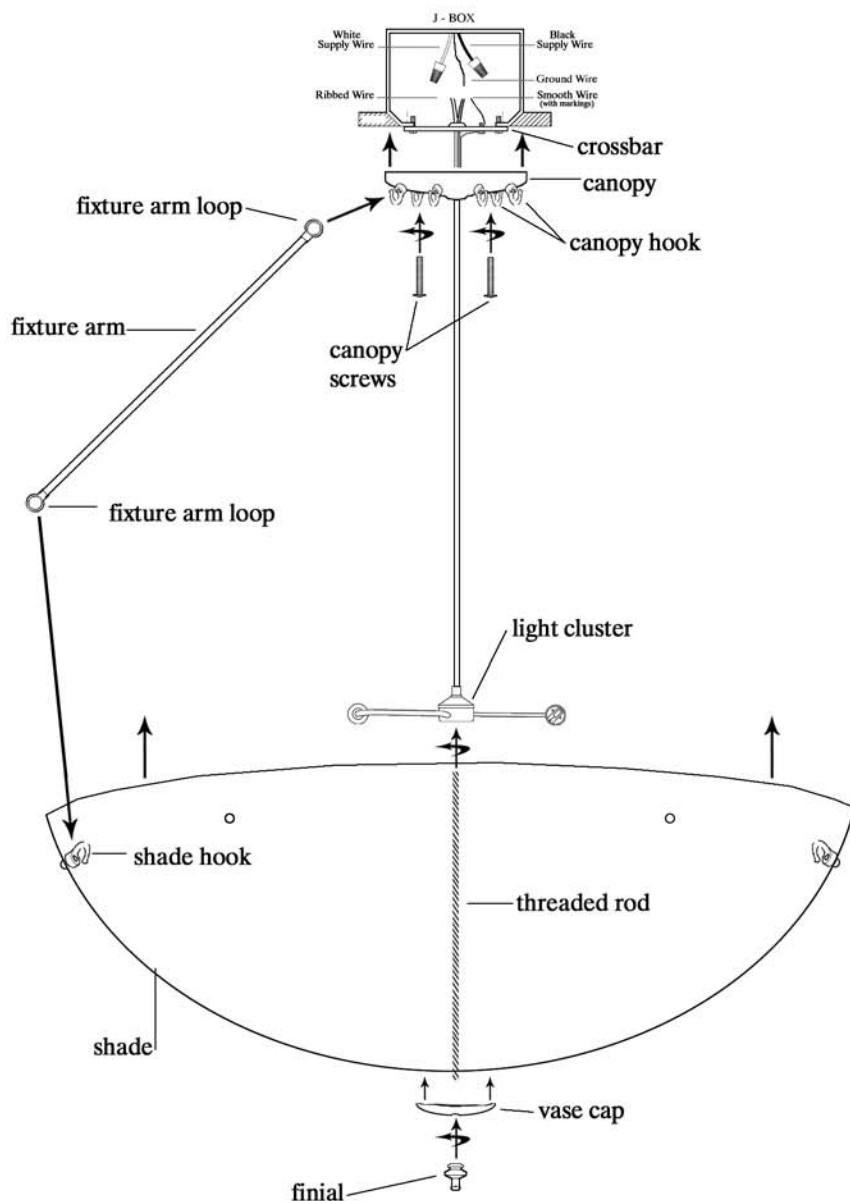

## IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**

1. Attach crossbar to j box.
2. Wire as per local electrical code.
3. Place canopy and fixture up to ceiling, screw canopy screws through canopy and into crossbar, tighten canopy to ceiling.
4. screw threaded rod into bottom of light cluster.
5. Place shade up and onto threaded rod
6. Place fixture arm loop onto canopy hook, repeat with remaining arms.
7. Place bottom fixture arm loop onto shade hook and repeat with remaining arms.
8. Place vase cap onto threaded rod to bottom of shade.
9. Screw finial onto threaded rod and tighten to vase cap.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)