


ASSEMBLY INSTRUCTIONS FOR #113230 (55213-5)

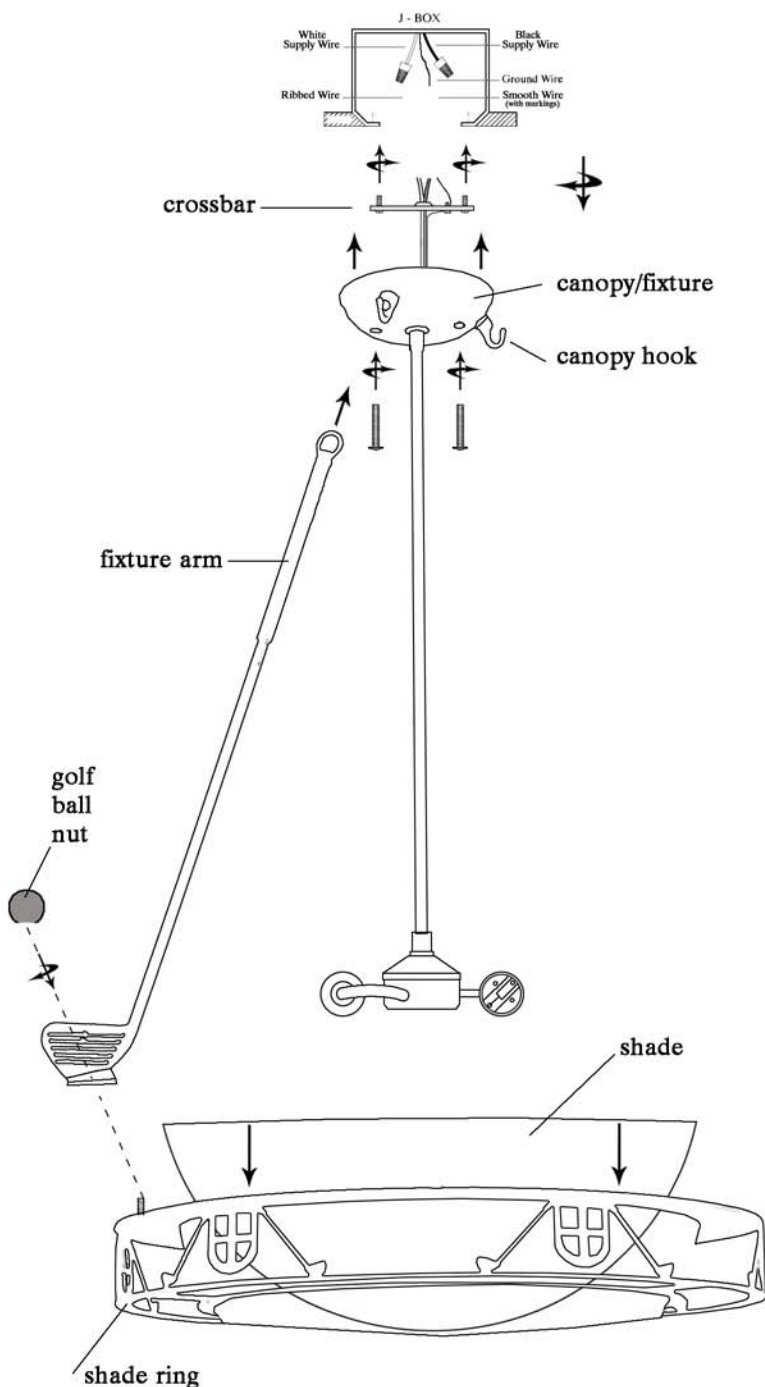

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j box.
2. Wire as per local electrical code.
3. Screw canopy/fixture into crossbar and tighten to ceiling.
4. Attach 2 fixture arms to shade ring with golf ball nut. (Do Not Tighten)
5. Slide shade into shade ring.
6. Attach remaining fixture arm to shade ring. (Do Not Tighten)
7. Hook fixture arms onto canopy hooks.
8. Tighten fixture arms with golf ball nuts to shade ring.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com