


ASSEMBLY INSTRUCTIONS FOR # 115511 (1089-1)

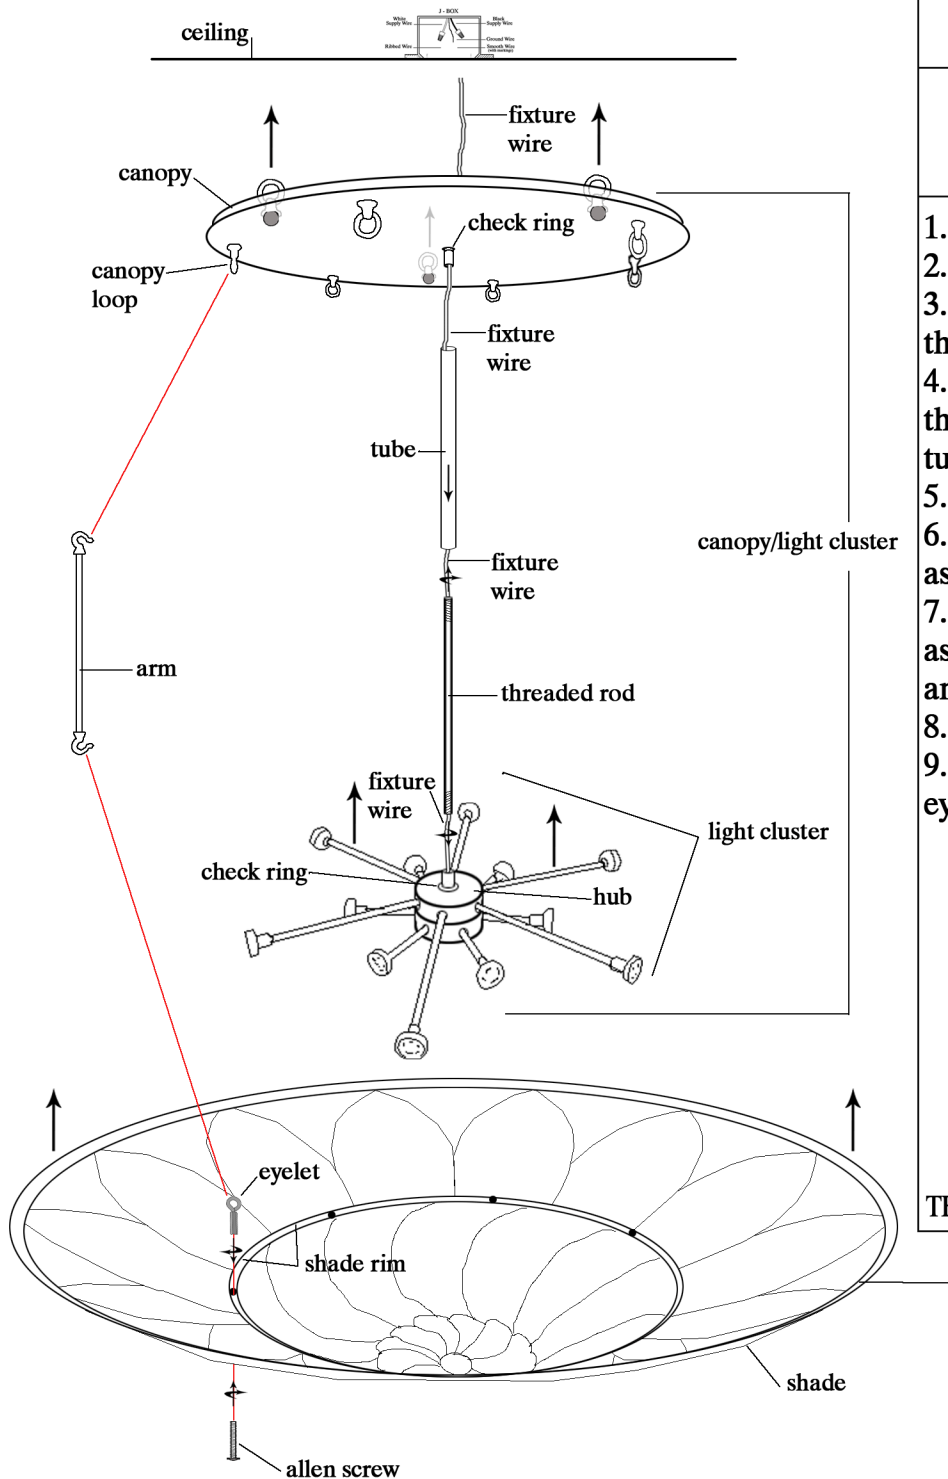

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place fixture wire through threaded rod.
2. Screw threaded rod into hub.
3. Place fixture wire through tube and over threaded rod, seat to check ring.
4. Place fixture wire through canopy, screw threaded rod/light cluster into canopy until tube seats to check ring.
5. Wire as per local electrical code.
6. Attach completed canopy/light cluster as per local code.
7. Place allen screw (6) through shade rim as shown. Screw eye lit onto allen screw and tighten to shade rim.
8. Attach arms to canopy loops.
9. Place shade up and attach arms to eyelets.

THIS FIXTURE WEIGHS APPROXIMATELY 90LBS.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com