
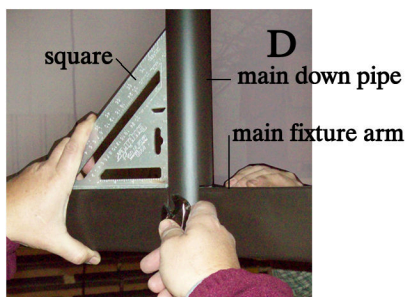
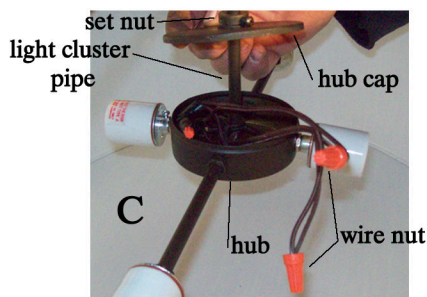
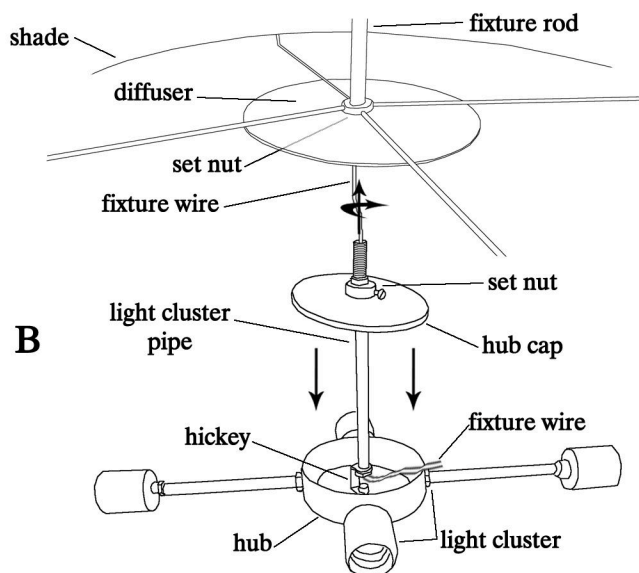
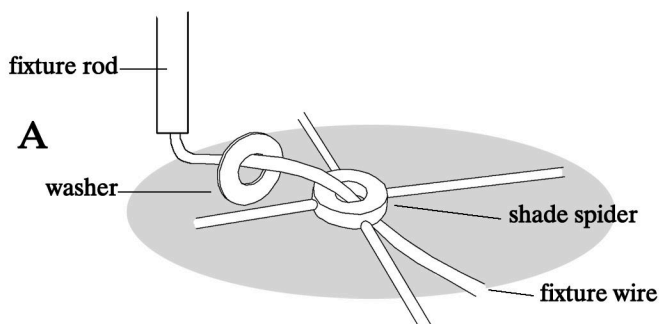


ASSEMBLY INSTRUCTIONS FOR #115756 (200170-1)

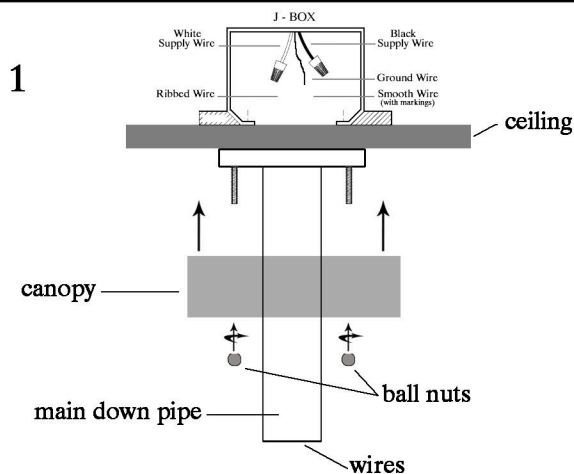

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove wires from main down pipe, place canopy onto main down pipe, place wires through main down pipe. FIG 1
2. Attach main down pipe to main fixture arm. FIG D
3. Wire as per local electrical code.
4. Attach fixture as per code.
5. Slide canopy up and attach with ball nuts. FIG 1
6. Place washer onto fixture wire, place fixture wire through shade spider, hold shade up to fixture rod. FIG. A
7. Place fixture wire through light cluster pipe, thread through hickey, take up slack of fixture wire while sliding light cluster up to fixture rod. FIG B
8. Screw light cluster into fixture rod, tighten set nut located under diffuser, slide hub cap and set nut up and wire fixture wire to hub wires, secure with wire nuts and electrical tape. FIG B & C
9. Gently tuck all wires into hub, place hub cap onto hub, slide set nut down to hub cap and tighten. FIG C
10. To tighten main down pipe to main fixture arms, place square onto main fixture arm and against down pipe, tighten (2) nuts as shown. FIG D



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com