


ASSEMBLY INSTRUCTIONS FOR #115771 (23440-1)

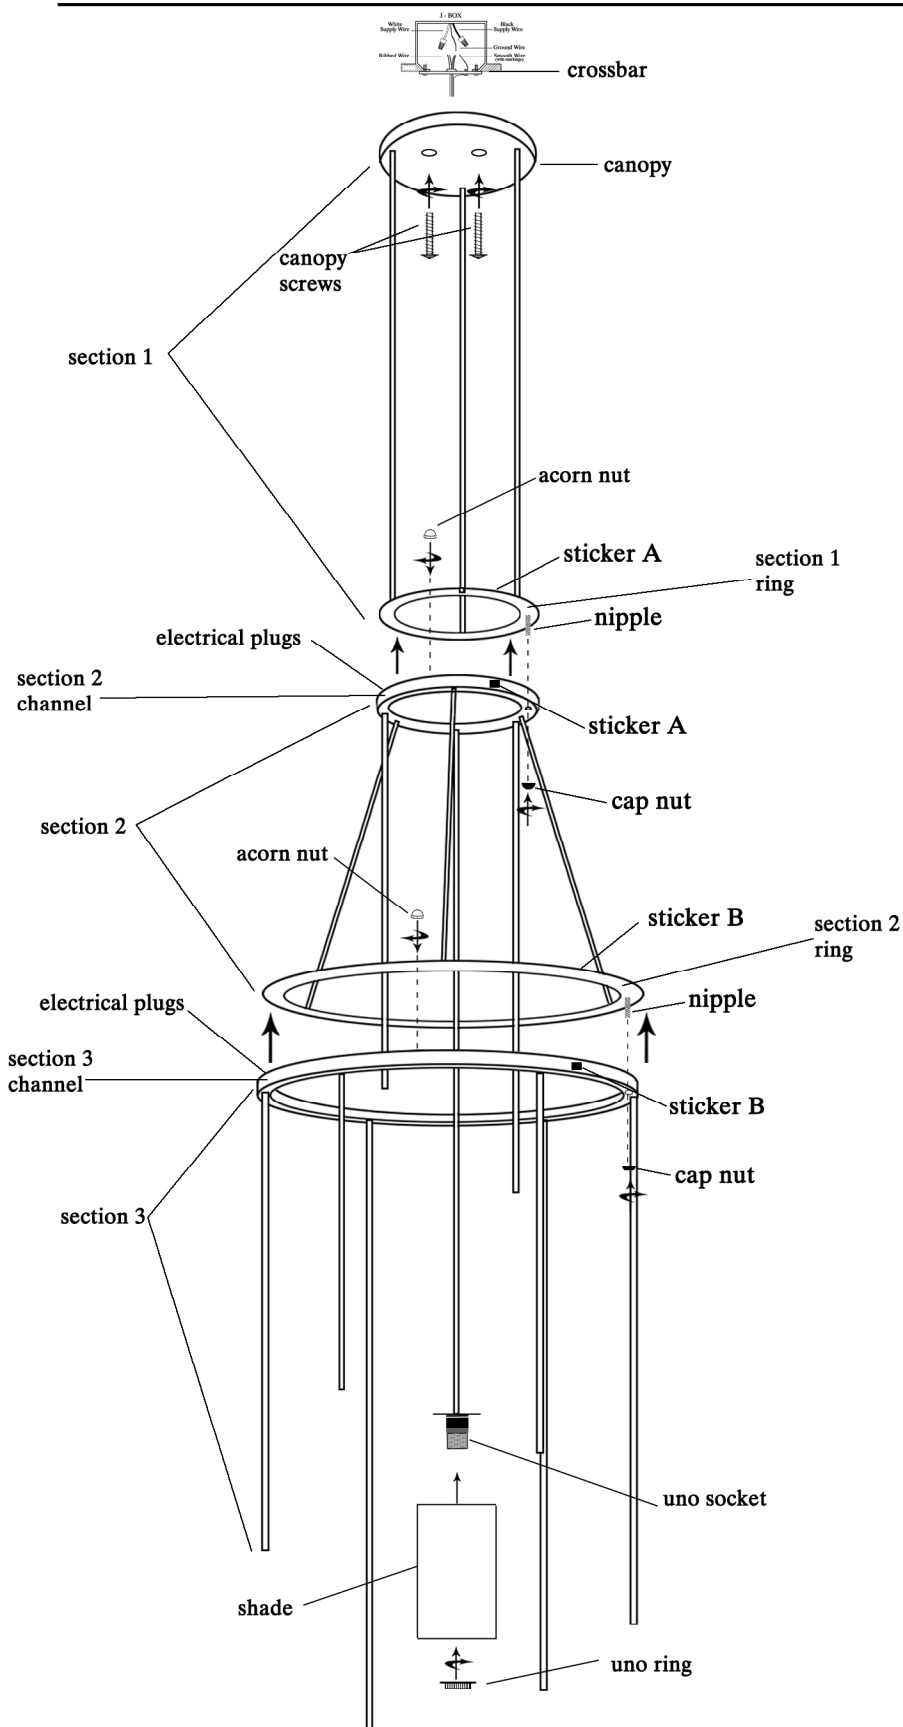

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to J-box using customer provided screws.
2. Wire as per local electrical code.
3. Place section 1 onto crossbar and attach with canopy screws.
4. Place section 2 up to section 1 and connect electrical plugs.
5. Line up sticker A (located on top of section 1 ring) with sticker A (located on side of section 2 channel). Make sure that no fixture wires are pinched as you put these sections together.
5. Screw acorn nut onto nipple hidden in section 2 channel, screw cap nut onto section 1 nipple.
6. Place section 3 up to section 2 and connect electrical plugs.
7. Line up sticker B (located on top of section 2 ring) to sticker B (located on side of section 3 channel). Make sure no fixture wires are pinched as you put these sections together.
8. Screw acorn nut onto nipple hidden in section 3 channel, screw cap nut onto section 2 nipple.
9. Place shades onto uno sockets and secure with uno rings.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

