

ASSEMBLY INSTRUCTIONS FOR #118135 (48259-62)

FIG.A

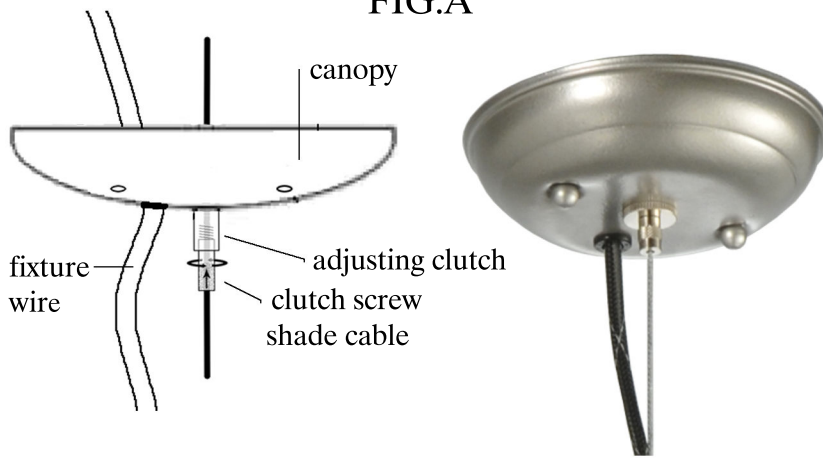


FIG.B


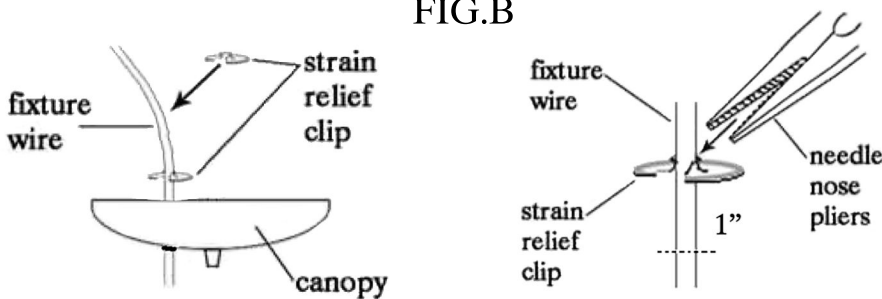


FIG.D

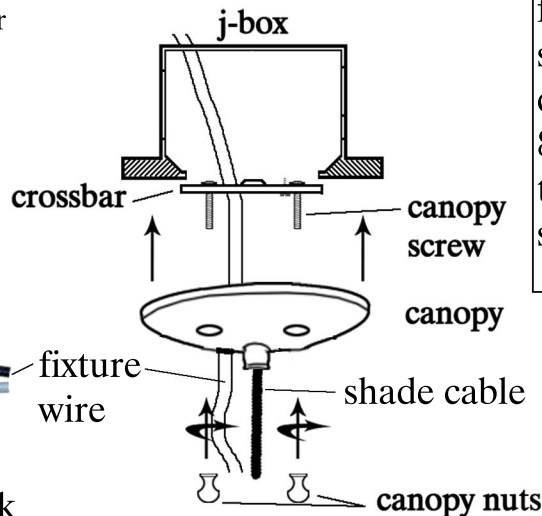

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Thread fixture wire through canopy. Thread shade cable through adjusting clutch. FIG.A
2. Determine the overall length of fixture from ceiling to bottom of shade.
3. Tighten clutch screw to set shade cable at this length. FIG.A
4. Add 1" to pre determined fixture wire length and place strain relief clip onto wire at this location. FIG.B
5. Using needle nose pliers crimp strain relief clip onto fixture wire. FIG.B
6. Remove excess shade cable.
7. Remove cover from driver, place fixture wire into wire block and secure with screws as shown. Replace cover. FIG.C
8. Attach crossbar with canopy screws to j box. Attach fixture to crossbar screws and tighten to ceiling. FIG.D

* Driver does not fit in canopy, remote installation required.


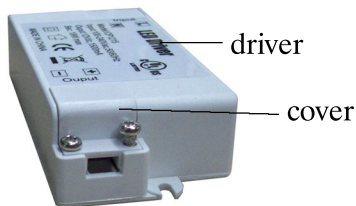


FIG.C

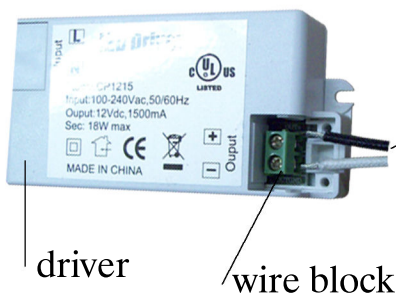

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

