


ASSEMBLY INSTRUCTIONS FOR #118845 (TR860-18-8-L860-8)

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY.

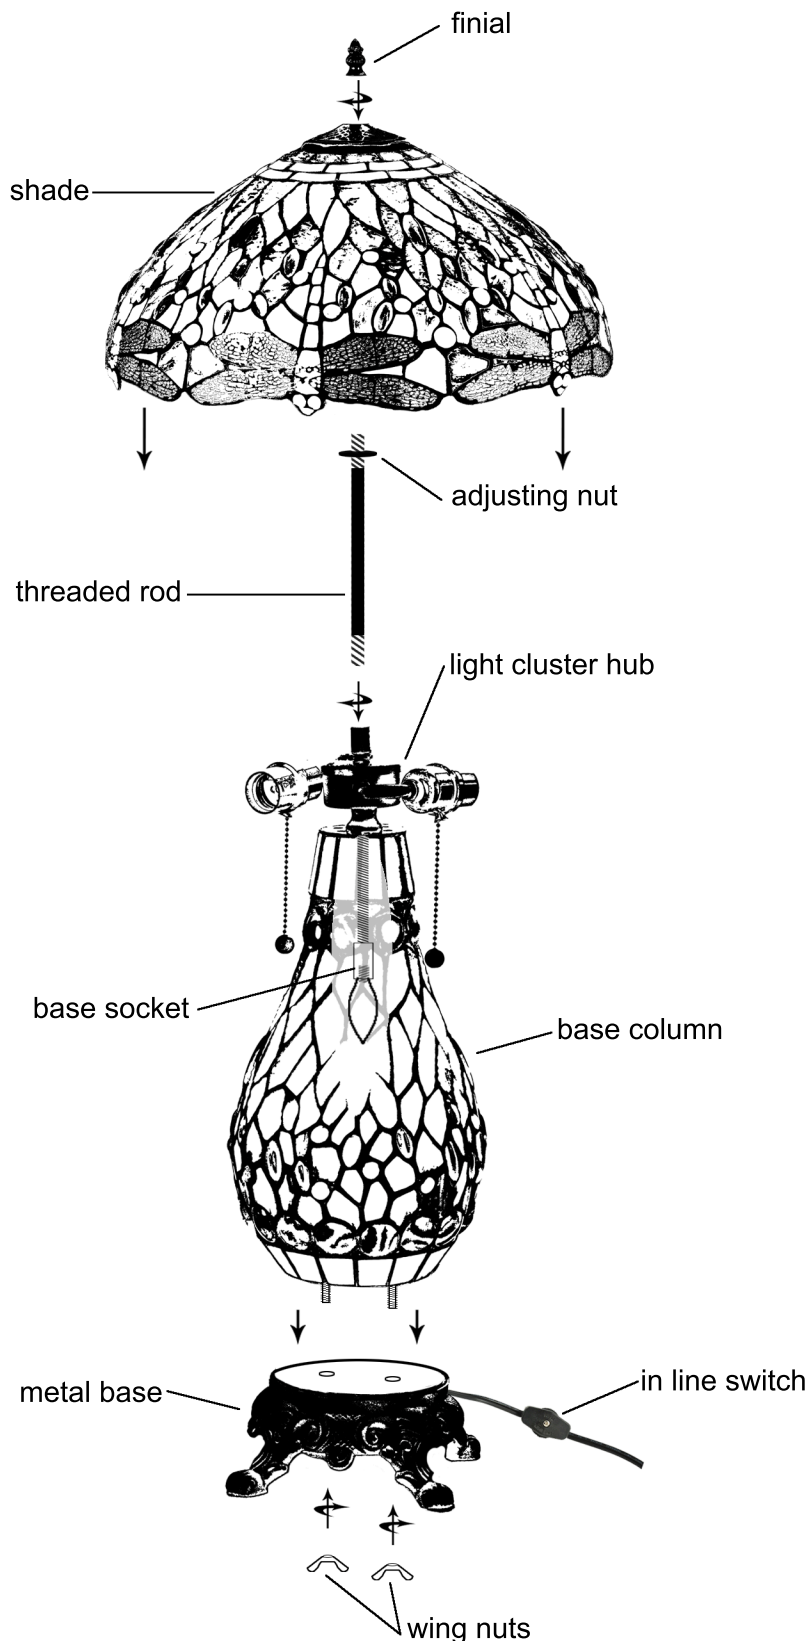

1. Place cndl. light bulb into base socket.
2. Attach metal base to base column, secure with wing nuts.
3. Screw threaded rod into top of light cluster hub.
4. Screw adjusting nut one half inch down onto threaded rod.
5. Place shade onto threaded rod and secure with finial.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

