


ASSEMBLY INSTRUCTIONS FOR #12114 (ST-18-22-M1S-18)

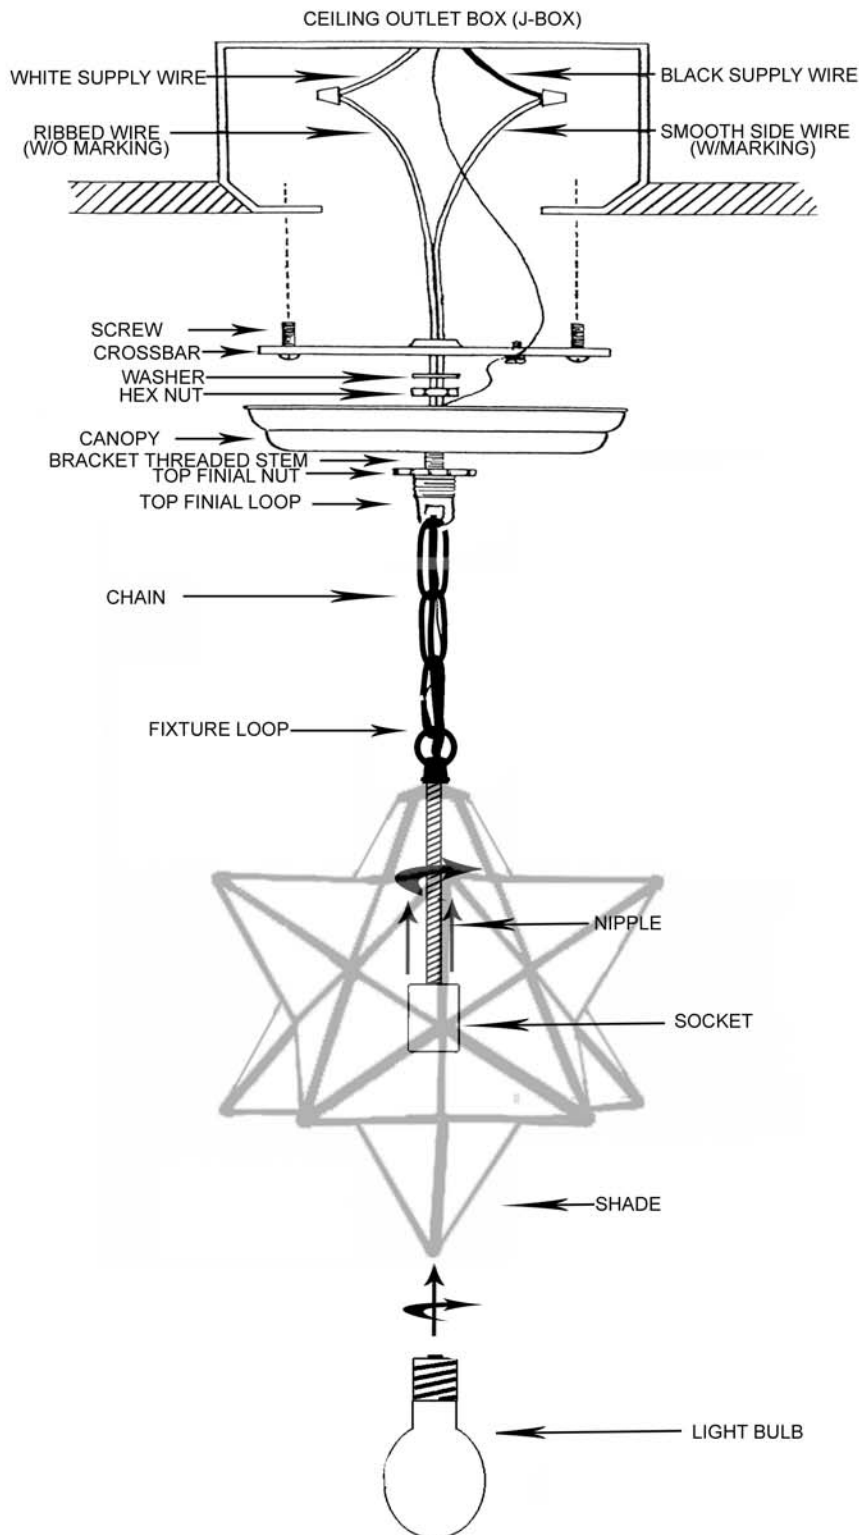

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place socket with nipple and wire through vase cap of shade and screw into fixture loop.
2. Thread wire through chain links, top finial loop and canopy.
3. Attach crossbar to ceiling outlet box.
4. Attach elec. wire as shown (wire as per. local elec. code).
5. Screw bracket threaded stem with top finial nut, top finial loop and canopy into crossbar.
6. Screw top finial nut up to tighten canopy to ceiling.
7. Screw light bulb into socket.
8. Turn power on from breaker box to outlet box.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com