

# ASSEMBLY INSTRUCTIONS FOR #123291



## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX BEFORE STARTING  
INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL  
PARTS BEFORE ASSEMBLY. BULBS ARE NOT  
INCLUDED

Place shades before or after 3lt. bar hardware is con-  
nected to ceiling. (Step 3)

- 1.) Attach crossbar to ceiling or J-Box. There should be a nipple pointing down ready to receive canopy.
- 2.) Attach desired amount chain to canopy loops and the other end to the 3lt bar loops (times two). Run your electrical wire up the length of chain and through the holes/loops of canopy. Raise canopy and light bar to power source and connect all electrical wires as per your local codes. Slide canopy up onto the nipple and secure canopy flush to ceiling by screwing the finial onto the nipple.
- 3.) Attach shades: Place shade onto the bar hardware's socket followed by the cork ring. Secure shade to light bar by screwing the socket ring onto socket. Repeat for other two shades. Start with the middle shade.
- 4.) Bulb your fixture (bulbs provided by others). Power on, enjoy your new fixture!

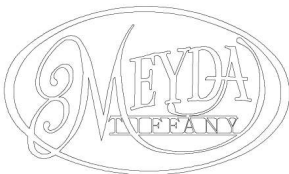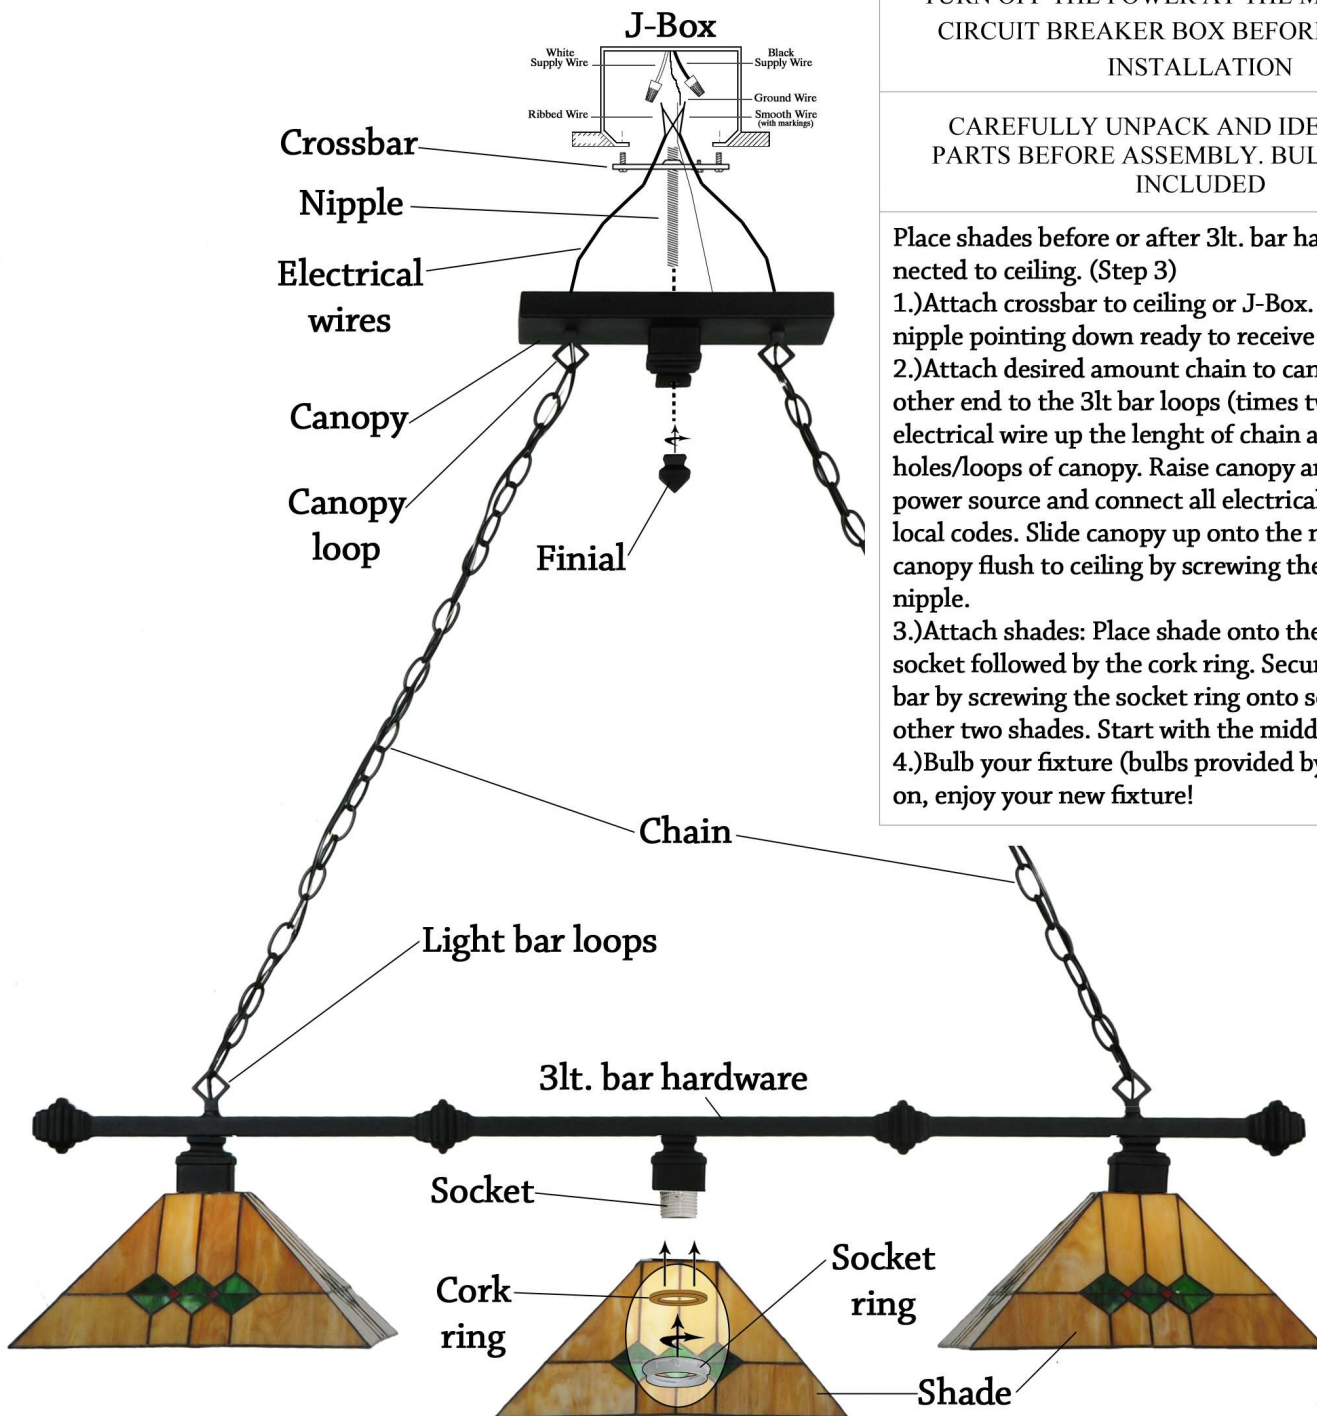

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)