


ASSEMBLY INSTRUCTIONS FOR #12436 TFA 14

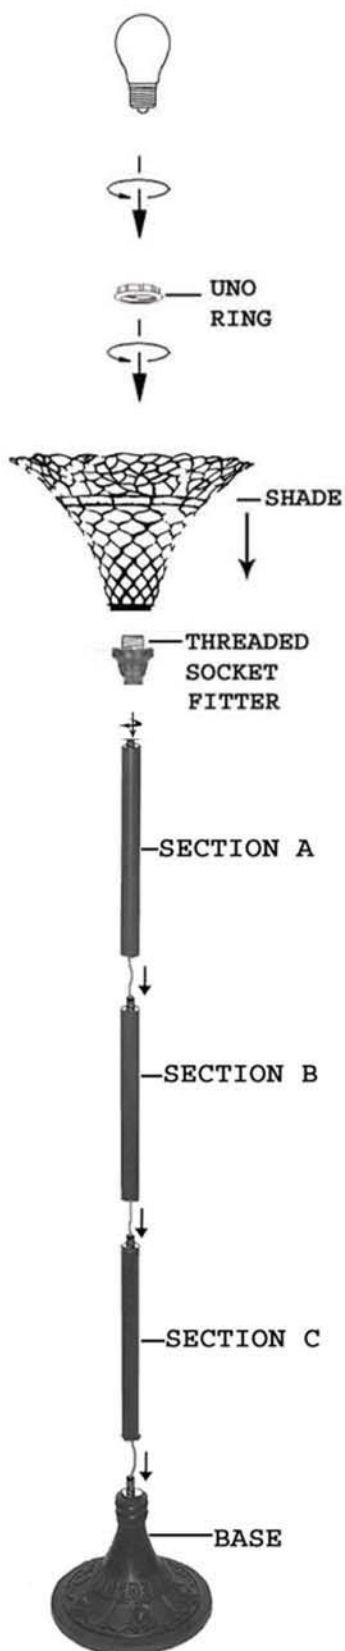

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw threaded socket fitter into pipe section A.
 2. Screw pipe section A into pipe section B.
 3. Screw pipe section B into pipe section C.
 4. Screw all pipe sections into base.
 5. Place shade into threaded socket fitter. Shade not included.
 6. Screw uno ring onto threaded socket.
- *To tighten shade properly, turn shade and uno ring clockwise simultaneously*
7. Screw light bulb into socket.
 8. Plug fixture into wall outlet and ENJOY!

CAUTION: Do NOT over tighten!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com