


# ASSEMBLY INSTRUCTIONS FOR #124491 (38101-2)

0244 03/27/11

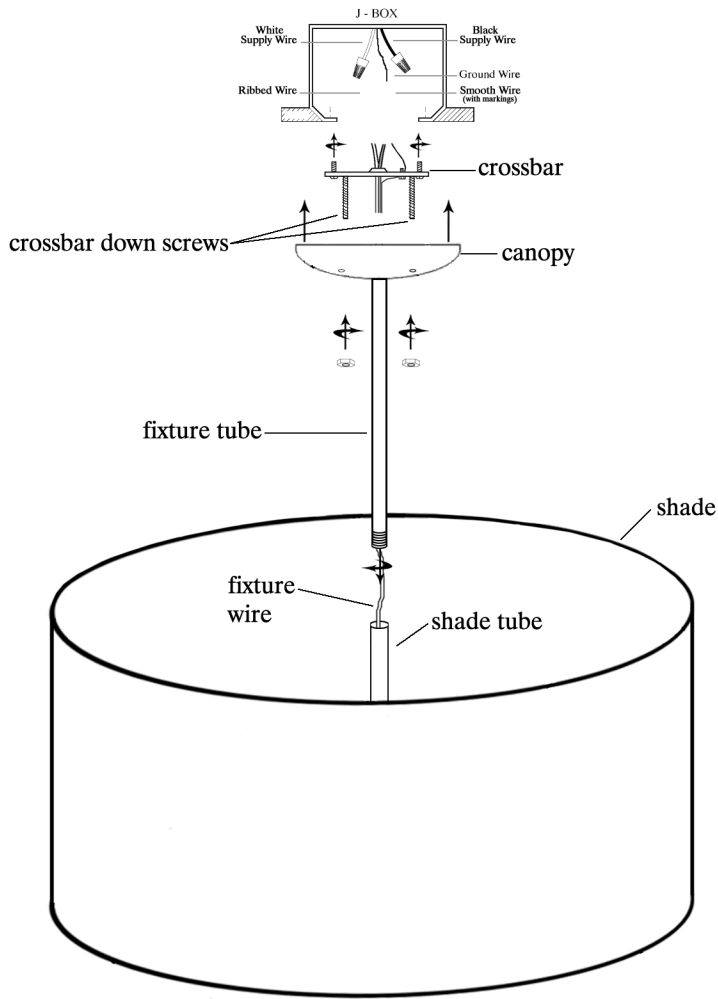

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with down screws to jbox.
2. Thread fixture wire through fixture tube.
3. Screw fixture tube into shade tube,
4. Wire as per local electrical code.
5. Place canopy onto crossbar down screws, tighten to ceiling



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)