
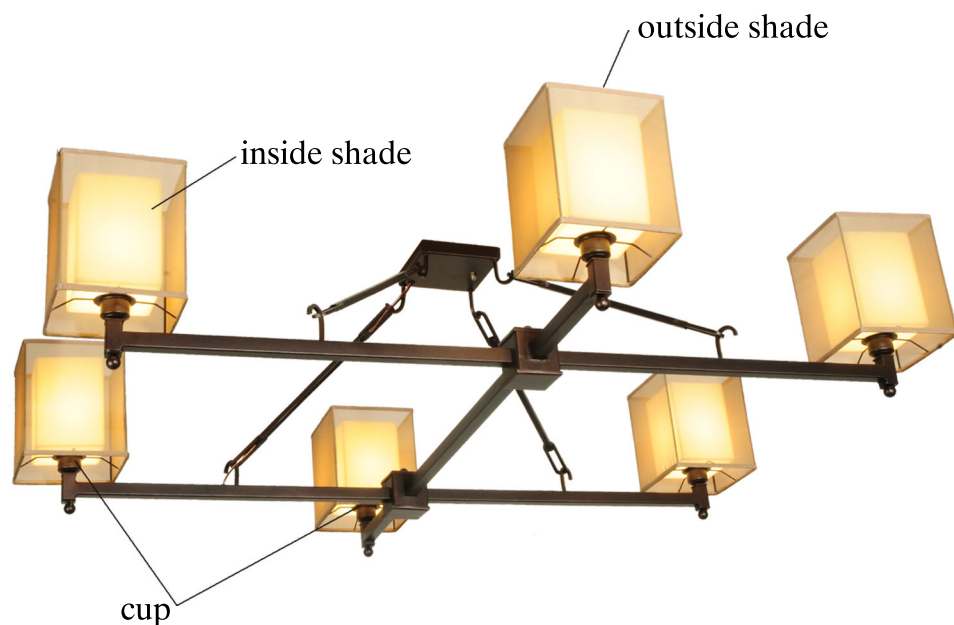


ASSEMBLY INSTRUCTIONS FOR #125067 (5633-21E)

0244-08/09/11

FIG.A

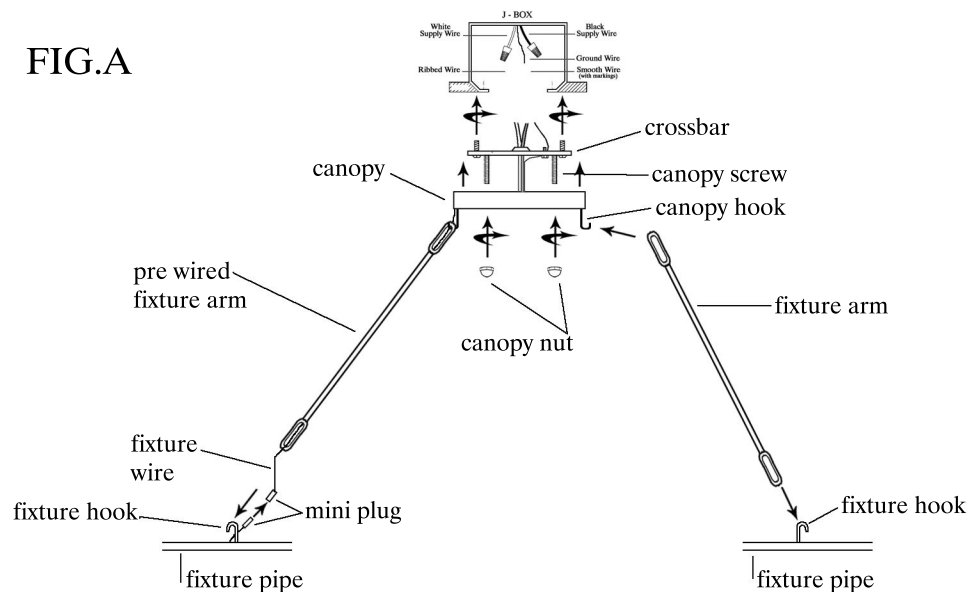

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar with canopy screws to j box. FIG.A
2. Place canopy with one pre wired fixture arm onto canopy screws. Attach with canopy nuts (DO NOT TIGHTEN). FIG.A
3. Wire as per electrical code. Tighten canopy to ceiling
4. Attach remaining fixture arms to canopy hooks.FIG.A
5. Attach fixture arms to fixture hooks (make sure that pre wired fixture arm is attached to fixture hook with mini plug location). Attach mini plug. FIG.A
6. Gently push excess fixture wire into fixture arm and fixture pipe.

MEYDA LIGHTING STRIVES TO PACK YOUR FIXTURE TO VERY HIGH AND EXACTING STANDARDS. UNFORTUNATELY THE NATURE OF TRANSPORT ALLOWS FOR THE SHIFTING OF CARGO WHICH IS BEYOND OUR CONTROL. AT TIMES THIS CAUSES CERTAIN AREAS OF THE FIXTURE TO REQUIRE ADJUSTMENT.

The cup holding the socket may become out of shape, If this happens gently grasp the cup with your hand and straighten. Attach the outside then the inside shade to the fixture and check for level. If needed repeat the above procedure until all shades are straight.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com

