

ASSEMBLY INSTRUCTIONS FOR #12569 3276-15-1-L3276-1

IMPORTANT
CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

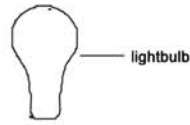


FIG.A



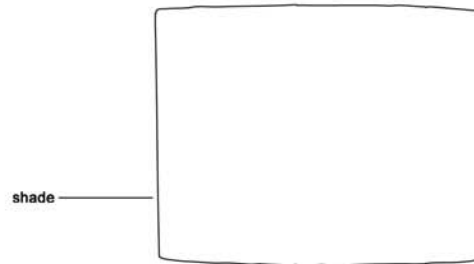


FIG.B

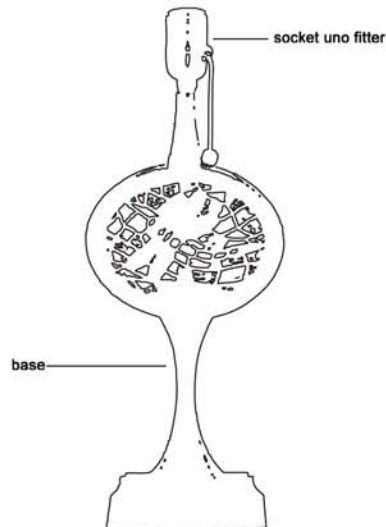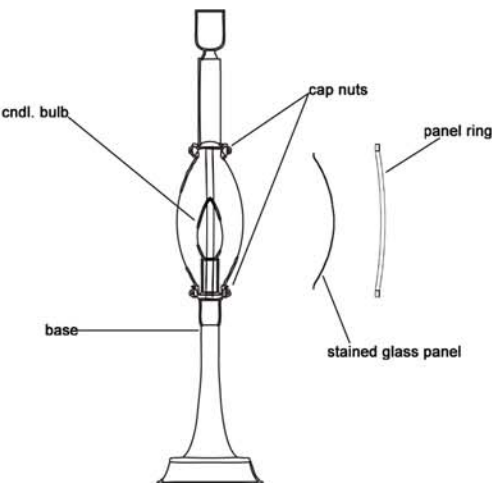

1. Place shade onto socket uno fitter.FIG.A

2. Screw uno ring onto socket uno fitter and tighten to shade.FIG.A

3. Screw light bulb into socket uno fitter.FIG.A

4. To replace cndl. bulb in base remove cap nuts from the back side of base.FIG.B

5. Carefully remove panel ring and stained glass panel.FIG.B

6. Replace candelabra bulb, replace stained glass panel, panel ring and cap nuts. FIG.B



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com