


ASSEMBLY INSTRUCTIONS FOR #DF-3

DF-8A, 8B, 8C *THIS IS A TWO PERSON JOB*

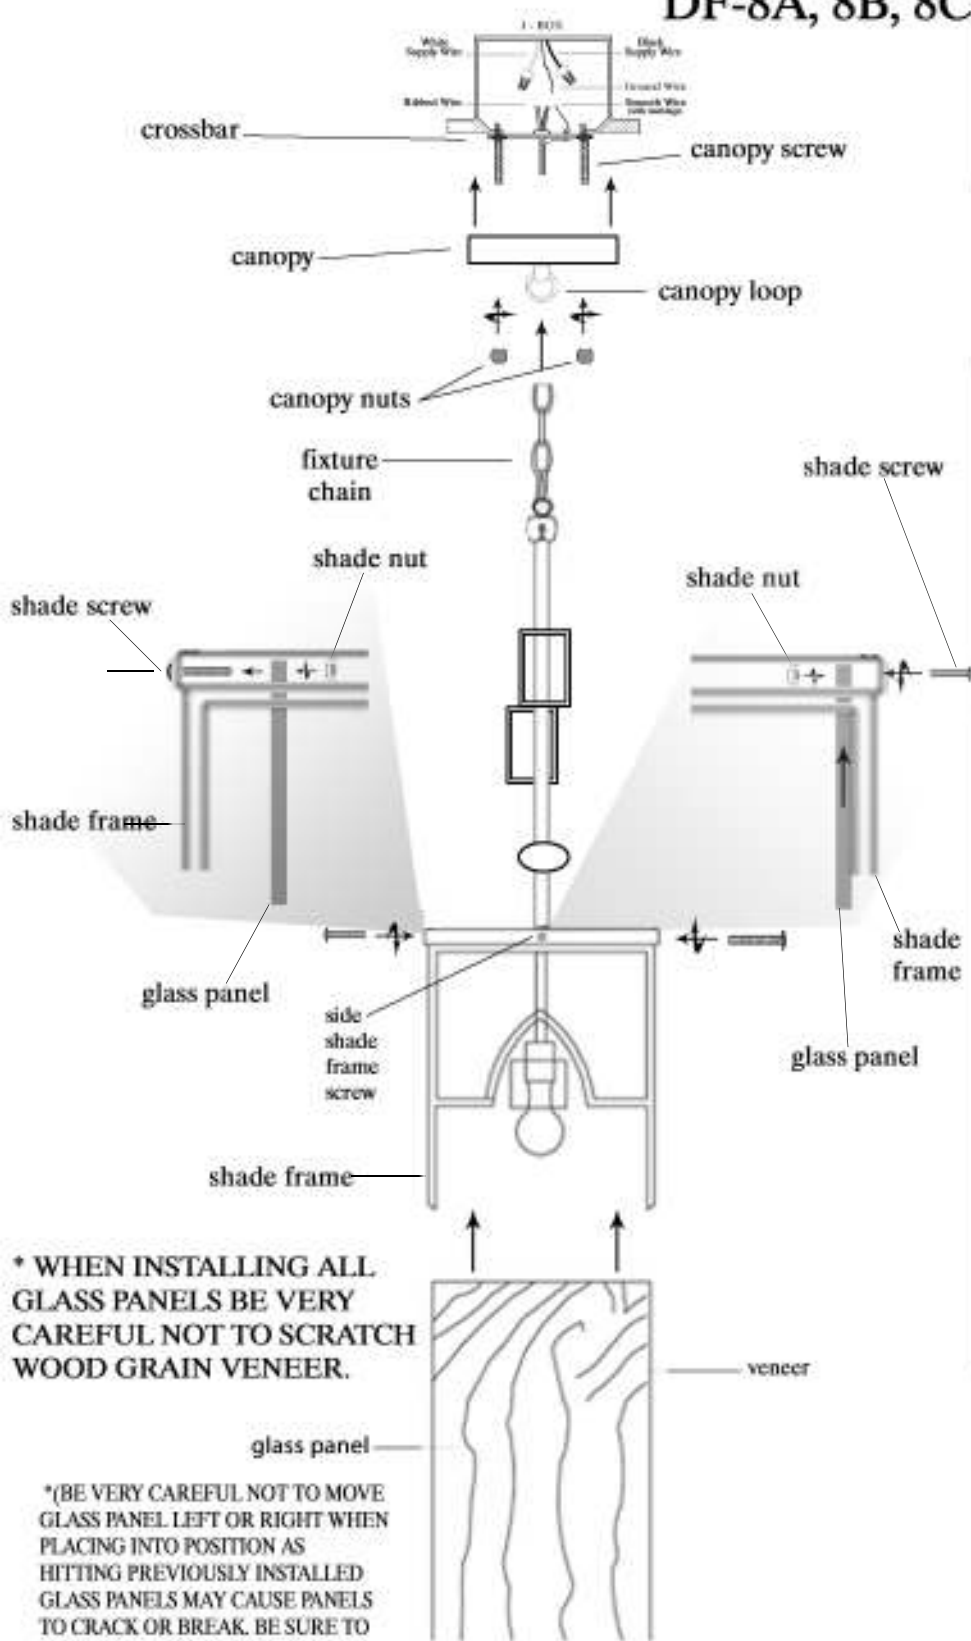

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION. CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED.

1. Attach crossbar with canopy screws to jbox.
2. Attach fixture chain to canopy loop.
3. Thread fixture wire up through fixture chain, canopy loop and canopy.
4. Wire as per local electrical code.
5. Place canopy/fixture up onto canopy screws and secure with canopy nuts.
6. Remove shade screws (2) from opposing side of top shade frame. Remove shade nuts from remaining shade screws.
7. Hold first shade panel securely and carefully, place onto one of the shade screws that are screwed in.
8. Secure panel with shade nut and locktight provided.
- 9.) Repeat steps 7 & 8 for second glass panel. (Make sure to install the first two shade panels to opposing sides of shade frame).
10. Place the remaining glass panels carefully up and into shade frame.
11. Screw shade screws into shade frame, through hole at top of glass panel, secure with shade nut and lock tight. Finger tighten only.

* WHEN INSTALLING ALL GLASS PANELS BE VERY CAREFUL NOT TO SCRATCH WOOD GRAIN VENEER.

*(BE VERY CAREFUL NOT TO MOVE GLASS PANEL LEFT OR RIGHT WHEN PLACING INTO POSITION AS HITTING PREVIOUSLY INSTALLED GLASS PANELS MAY CAUSE PANELS TO CRACK OR BREAK. BE SURE TO KEEP GLASS PANELS VERTICAL THROUGHOUT INSTALLATION).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com