
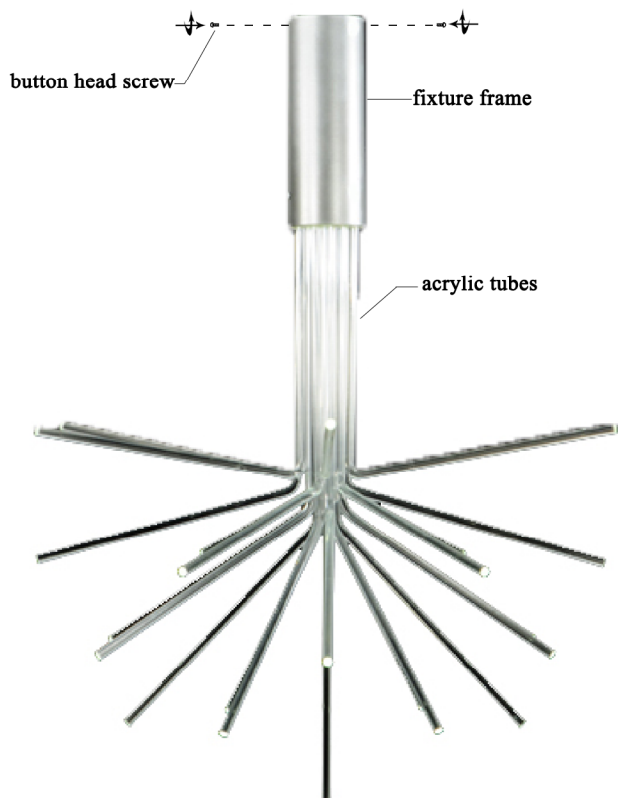
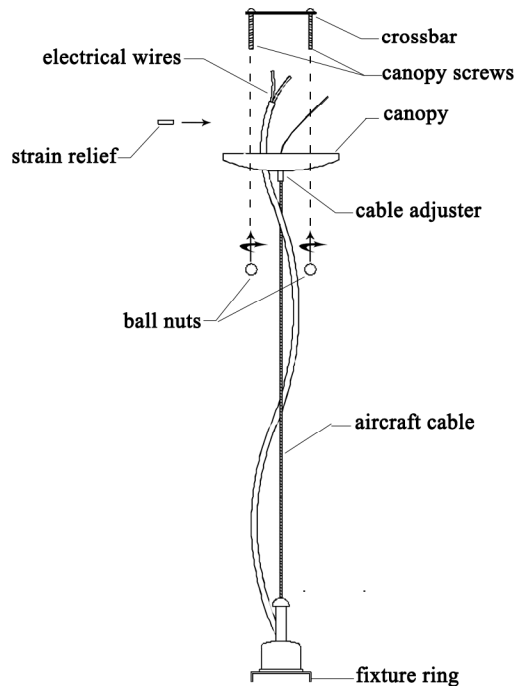


ASSEMBLY INSTRUCTIONS FOR #30880-52 (129962)



IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to j-box using customer provided screws.
- 2.) Attach fixture frame to fixture ring with button head screws, provided.
- 3.) Determine overall height of fixture.
- 4.) Insert aircraft cable and electrical wires up through canopy.
- 5.) Use cable adjuster to lock aircraft cable into position and cut off excess cable.
- 6.) Crimp strain relief onto electrical wires above canopy.
- 7.) Wire as per local electrical codes.
- 8.) Secure canopy to crossbar with ball nuts, provided.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com