


GLASS ASSEMBLY INSTRUCTIONS FOR #48259-280 (131886)

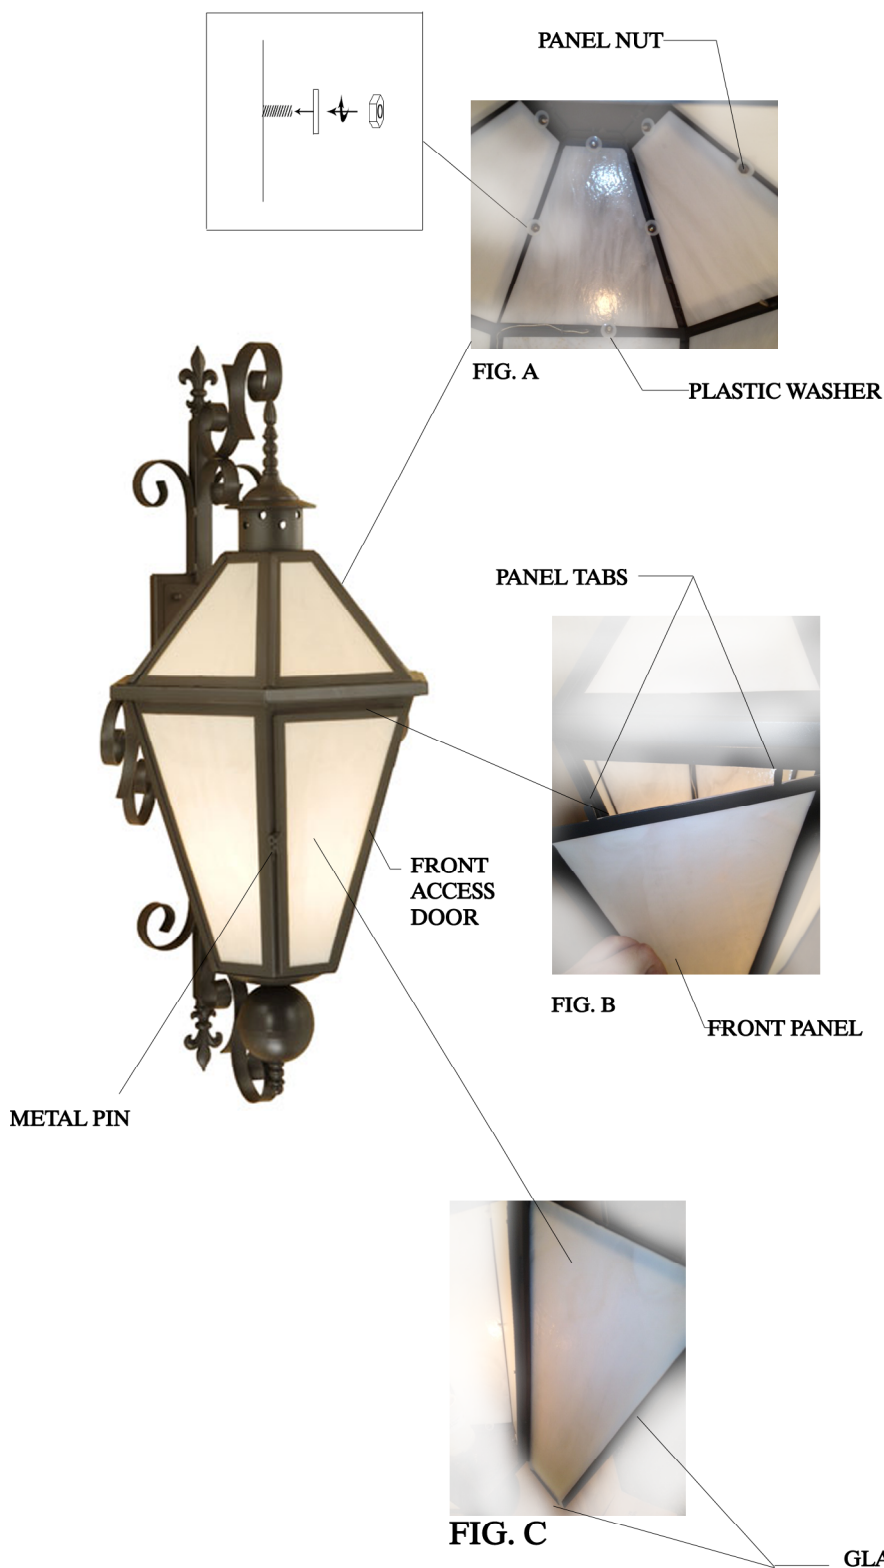

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Carefully lay out glass panels and identify correct positioning.
 - 2.) Remove metal pin and place aside.
 - 3.) Place panels in appropriate position and attach with plastic washers and panel nuts. (FIG. A)
 - 4.) Slide the front panel into glass channels (FIG. C) and secure by bending over panel tabs. (FIG. B)
- *BE CAREFUL NOT TO BEND TABS OVER TOO FAR OR GLASS WILL CRACK***
- 5) Lastly, insert metal pin to lock front access door.
 - 6.) Lamping and relamping can be done through front access door.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com