


# ASSEMBLY INSTRUCTIONS FOR #212632-19

## CH2 + CH3

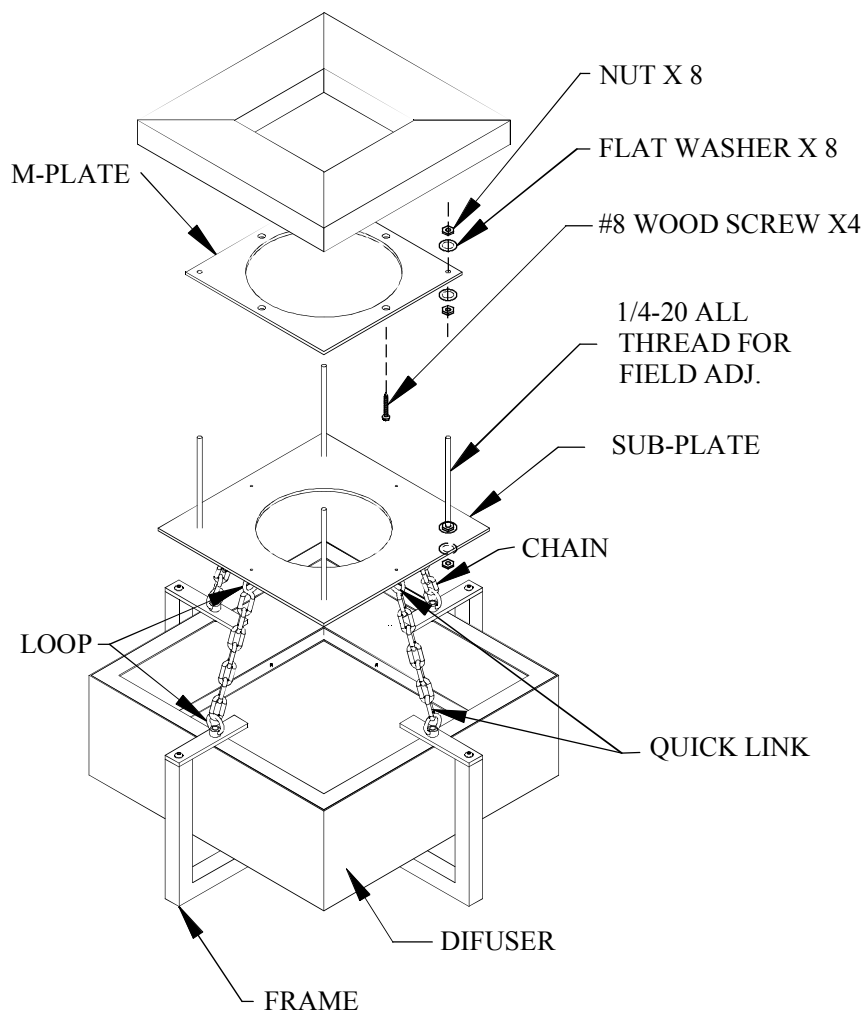


### IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS INSTALLATION REQUIRES TWO PEOPLE

- 1.) SCREW NUTS ONTO ALL-THREAD. PLACE WASHERS OVER NUTS AND INSTALL ALL-THREAD INTO M-PLATE. PLACE WASHERS OVER ALL-THREAD AND SCREW NUTS ON SECURELY.
- 2.) FOLLOW THE SAME PROCEDURE ATTACHING ALL-THREAD TO SUB-PLATE.
- 3.) INSTALL M PLATE TO WOODEN BLOCK SECURELY (FASTENERS SUPPLIED BY OTHERS).
- 4.) CUT CHAINS TO LENGTH.
- 5.) PLACE QUICK LINKS ON LOOPS OF SUB-PLATE AND ATTACH CHAINS.
- 6.) ATTACH QUICK LINKS TO LOOPS ON FIXTURE. WHILE SUPPORTING FIXTURE ATTACH CHAINS AND TIGHTEN QUICK LINKS.

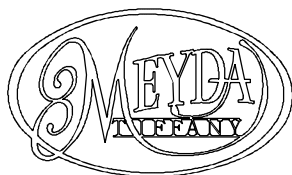

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at [www.meyda.com](http://www.meyda.com)