
ASSEMBLY INSTRUCTIONS FOR#133177

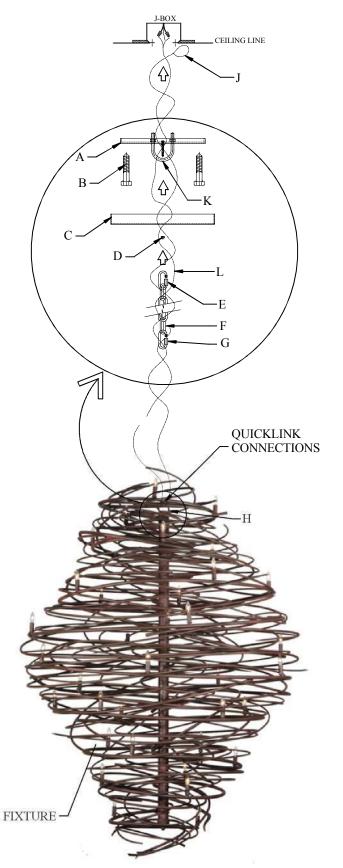

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS INSTALLATION REQUIRES TWO PEOPLE

THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more then 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight supported.

1) ATTACH C-4 CEILING PLATE ASSEMBLY (A) TO SECURE LOCATION WITH FASTENERS (B) PROVIDED BY OTHERS.

2) PULL J BOX WIRES THROUGH CEILING PLATE (A) IN PREPARATION OF MAKING THE CONNECTION.

3) STRING SAFETY CABLE (J) THROUGH COVER PLATE (C) AND FASTEN TO SECURE LOCATION.

4) STRING FIXTURE WIRE FROM TOP OF FIXTURE THROUGH CHAIN (F) & COVER PLATE (C) AND MAKE CONNECTION TO WIRE FROM J BOX. WIRE AS PER LOCAL ELECTRICAL CODES.

5) PLACE CANOPY COVER PLATE (C) OVER CEILING PLATE ASSEMBLY (A) AND SECURE WITH ACORN NUTS (D) PROVIDED.

6) CONNECT QUICKLINK (E) TO LOOP (K), SECURE CHAIN (F) INTO QUICKLINK THEN CLOSE SECURELY.

7) CONNECT QUICKLINK (G) TO BOTTOM END OF CHAIN (F).

8) LIFT FIXTURE INTO PLACE AND SECURE LOOP (H) AT TOP OF FIXTURE ONTO QUICKLINK (G).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 8:00a.m - 6:00p.m ET visit us on the web at www.meyda.com

