


ASSEMBLY INSTRUCTIONS FOR #134843 (5633-100)

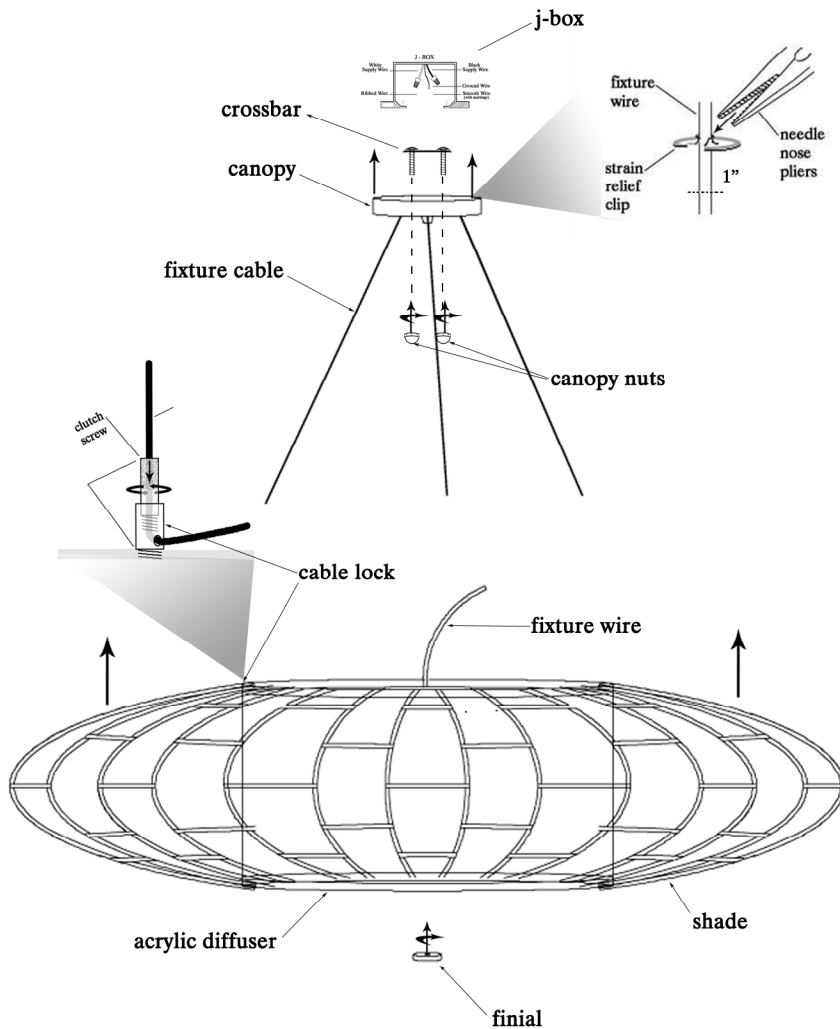

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Place fixture cables down through canopy and into cable locks (adjust fixture cable length and level, once correct tighten clutch screw).
- 2.) Place fixture wire up through canopy center, pull up through canopy to desired height, hold in place with strain relief clip as shown, trim fixture wire leaving 6" of wire above canopy.
- 3.) Attach crossbar to J-box.
- 4.) Hold up fixture and wire as per local electrical code.
- 5.) Secure canopy to crossbar with canopy nuts, provided.
- 6.) Remove finial and acrylic diffuser in order to lamp/re-lamp fixture.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com