


ASSEMBLY INSTRUCTIONS FOR #134928 (214340-16)

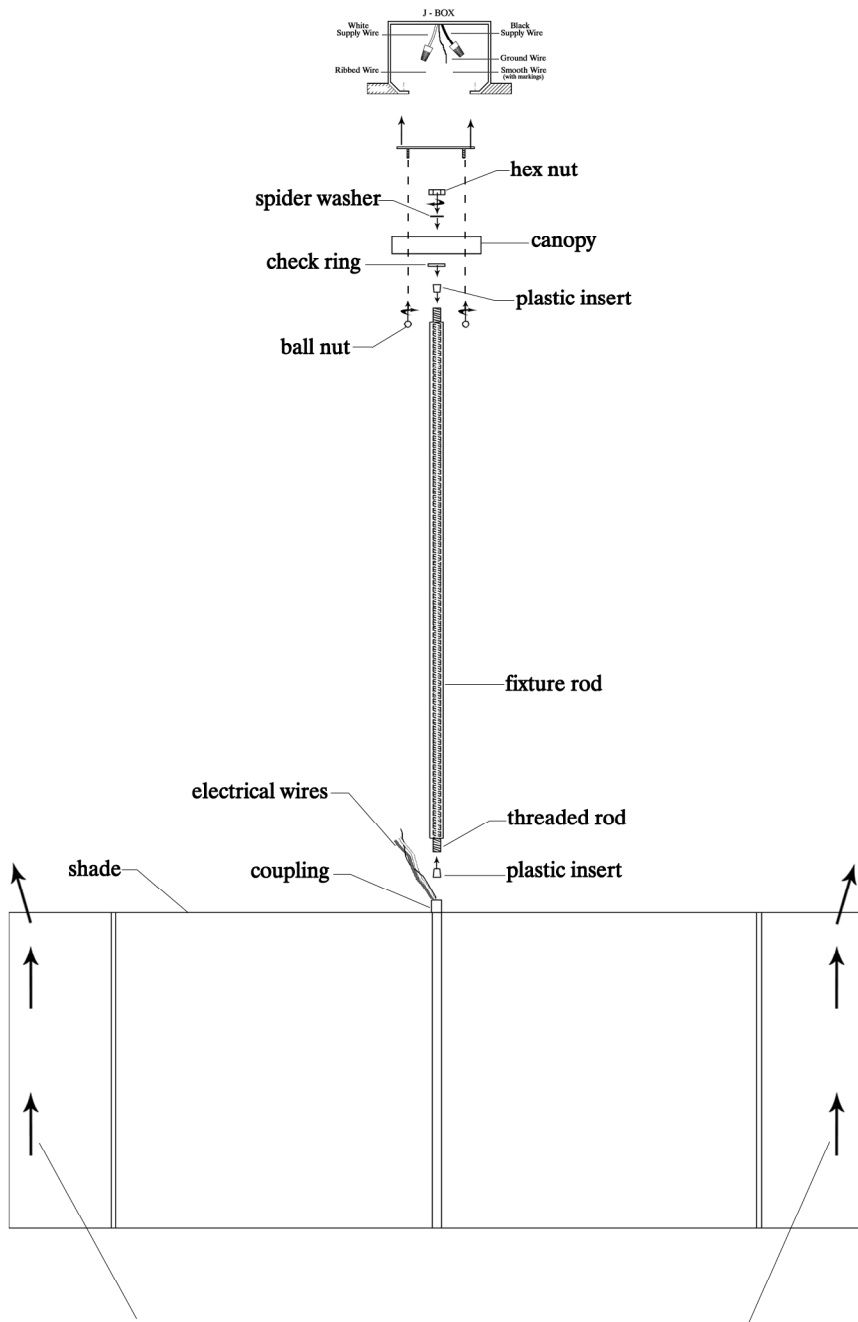

(TO REMOVE CELLOPHANE, PULL UP FROM THE INSIDE ONLY, OTHERWISE TRIM MAY BECOME UNGLUED)

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

DO NOT REMOVE CELLOPHANE WRAPPING UNTIL FIXTURE IS INSTALLED

(To remove cellophane, pull up from inside only, otherwise trim may become unglued)

- 1.) Place plastic insert inside bottom of threaded rod.
- 2.) Feed electrical wires up threaded rod and screw threaded rod onto coupling.
- 3.) Slide fixture rod over threaded rod.
- 4.) Attach check ring to threaded rod.
- 5.) Place other plastic insert onto electrical wires and insert inside top of threaded rod.
- 6.) Feed electrical wires through canopy and attach canopy to threaded rod using the spider washer and hex nut as shown.
- 7.) Attach crossbar to j-box using customer provided screws.
- 8.) Raise up assembled fixture, wire as per local electrical code, and attach canopy to crossbar using the ball nuts.
- 9.) To remove cellophane, pull up from the inside only, otherwise trim may become unglued.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com