


# ASSEMBLY INSTRUCTIONS FOR #136082 (202238-3)

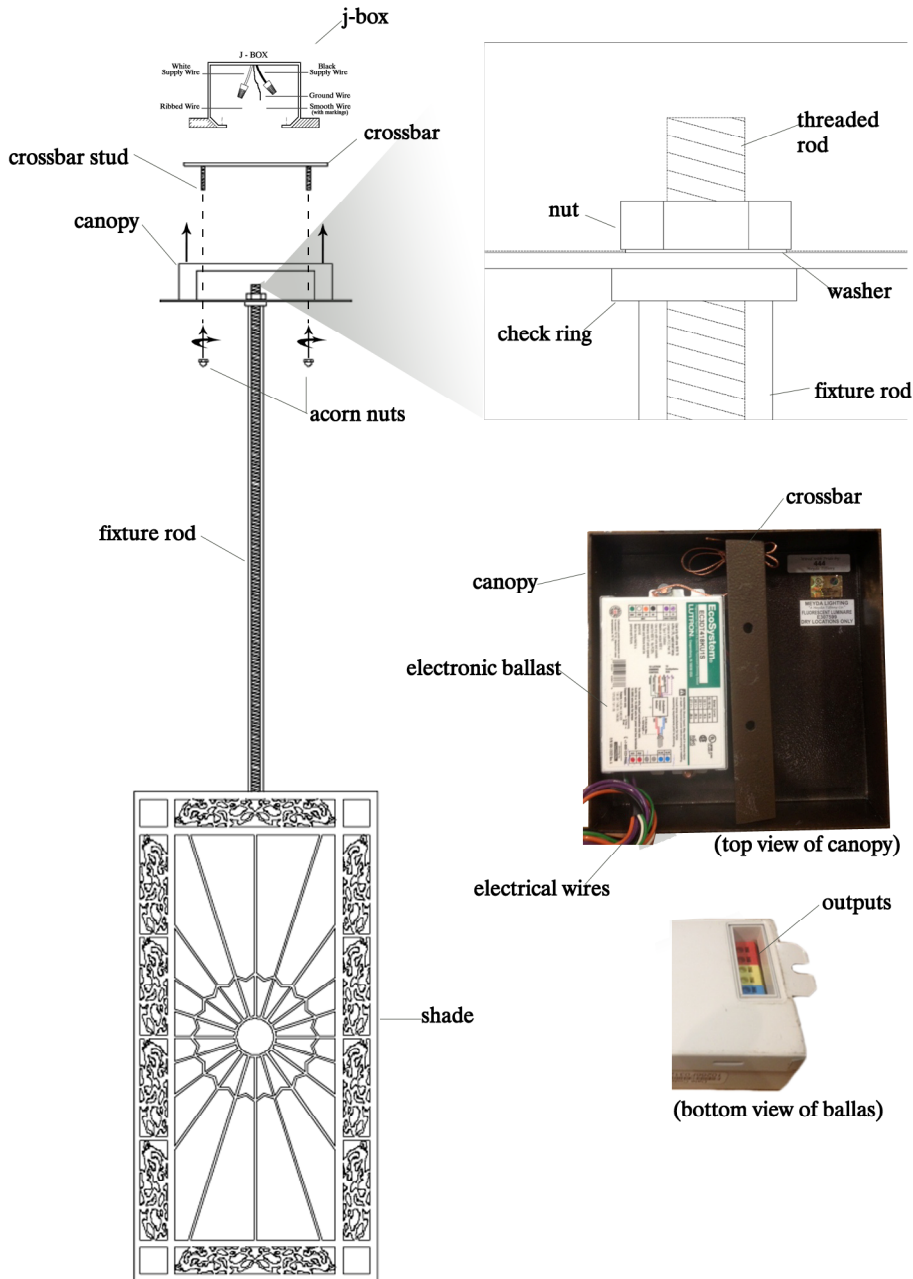

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Determine the desired overall height of the fixture.
- 2.) Remove acorn nuts from crossbar studs and remove crossbar from canopy.
- 3.) Unscrew the nut and remove the washer from the threaded rod.
- 4.) Detach the electronic ballast from the canopy and unplug the outputs.
- 5.) Push the wires into the fixture rod, remove the check ring, then cut the threaded rod and fixture rod to satisfy the desired overall height.
- 6.) Replace the check ring and secure the fixture rod to the canopy with the washer and nut.
- 7.) Plug the outputs back into the electronic ballast and reattach the ballast to the canopy.
- 8.) Mount the crossbar to a secure location, hold up fixture, and wire as per local electrical codes.
- 9.) Secure the canopy to the crossbar by screwing the acorn nuts onto the crossbar studs as shown.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)