


ASSEMBLY INSTRUCTIONS FOR #136277

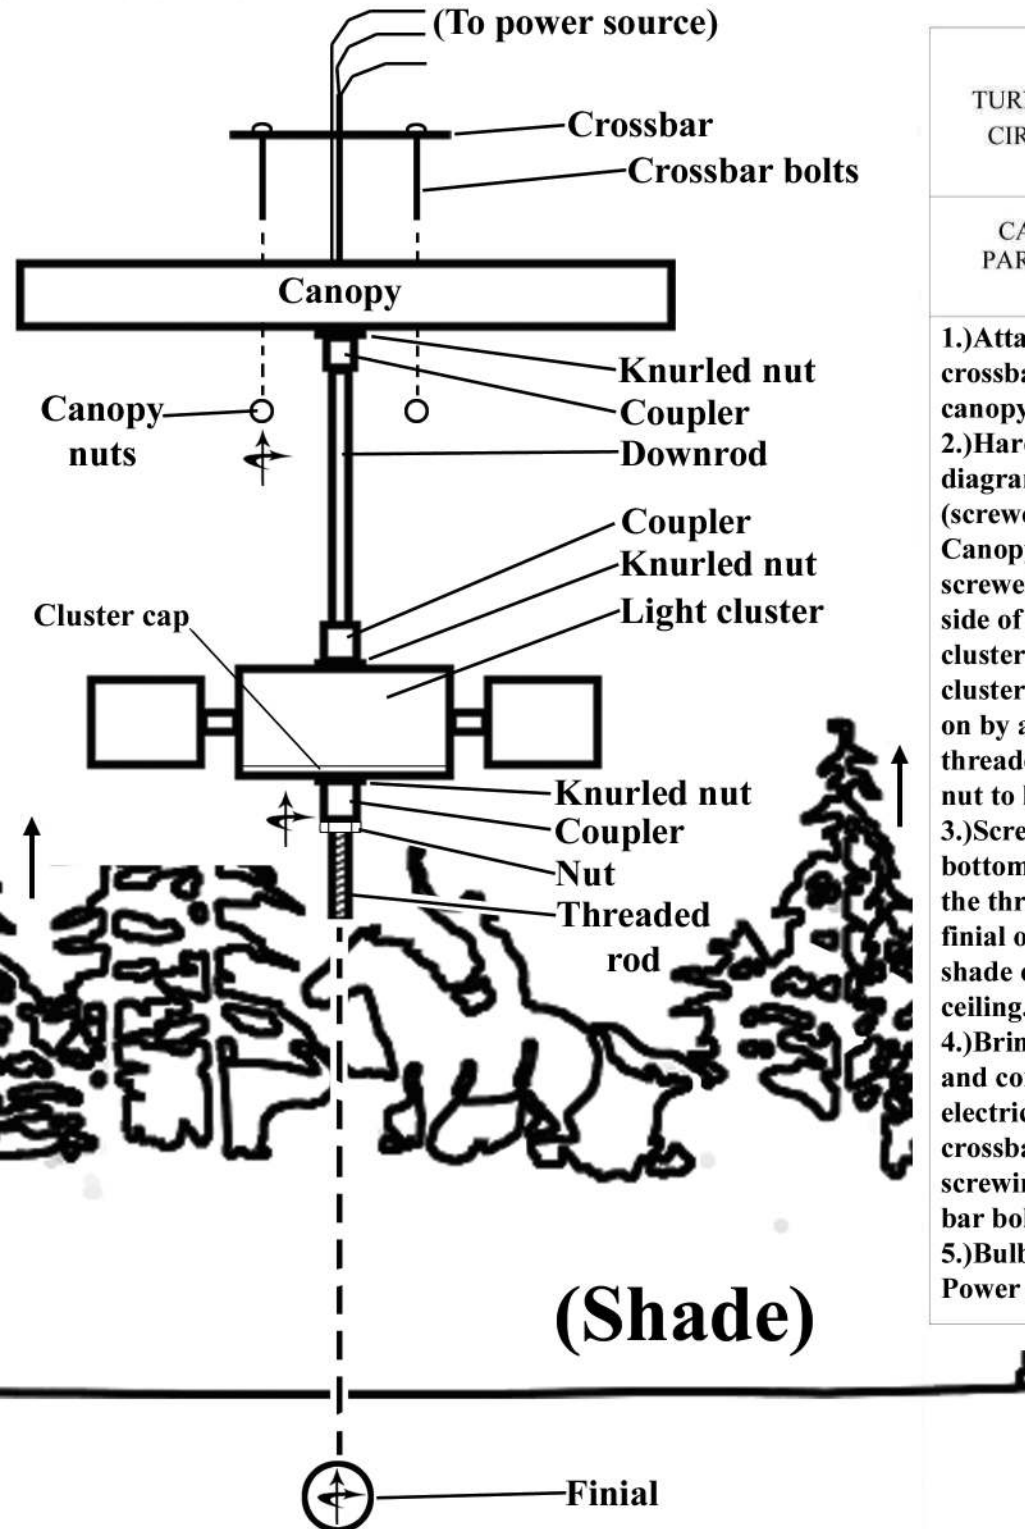

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Attach crossbar to ceiling. Be sure there is two crossbar bolts pointing down, ready to receive canopy.
- 2.) Hardware should be assembled as seen in diagram: inside canopy, a short threaded rod, nut, (screwed onto it) and lock washer then canopy. Canopy and then knurled nut, & coupler both screwed onto the short threaded rod. The bottom side of coupler will have the downrod and light cluster will be screwed into it. Under the light cluster there should be a cap under it that is held on by another knurled nut, and coupler. Screw the threaded rod into the bottom of the coupler, and a nut to keep it fixed in position.
- 3.) Screw a nut followed by a washer onto the bottom of the threaded rod. Slide shade up onto the threaded rod to meet the washer. Screw the finial onto the threaded rod. You may put the shade on after the hardware is connected to ceiling.
- 4.) Bring canopy/light cluster hardware to ceiling, and connect the electrical wires as per your local electrical code. Slide canopy up onto the two crossbar bolts, and secure flush to ceiling by screwing the two canopy nuts onto the two crossbar bolts.
- 5.) Bulb your fixture, (bulbs provided by others). Power on, enjoy your new fixture!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com